


Trainings ▾

Install

⚠ CAUTION ⚠

Do not blow compressed air into the ECM ports or connectors. Compressed air can contain moisture due to condensation.

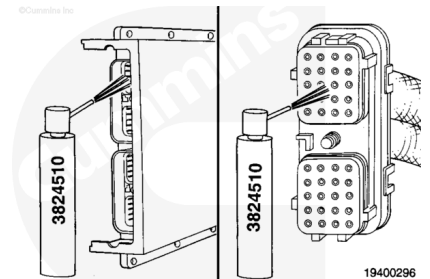

Use quick-dry electrical contact cleaner, Part No. 3824510, to remove all dirt and moisture from the ECM connector ports and the harness connectors.


Use an inch-pound torque wrench, Part Number 3376592, with 4 mm [5/32-in] hex head adapter to tighten the connector jackscrew.

Torque Value: 2.8 n•m [25 in-lb]

Note : Do not over-torque as connector damage can occur.

⚠ CAUTION ⚠

Make sure there is no grease or dirt between the ECM and the control valve body.

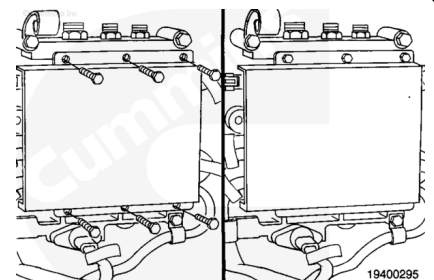

Install the new ECM to the control valve body. Tighten the six capscrews.

Torque Value: 8 n•m [72 in-lb]