


Trainings ▾


Install

Feed 6 wire ties through the clips of the harness support bracket.

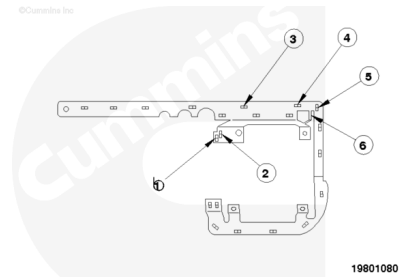


Connect the engine harness Deutsch connector to the ECM.
Use a 4 mm [5/32 inch] hex head wrench to tighten.

Torque Value: 3 n•m [25 in-lb]

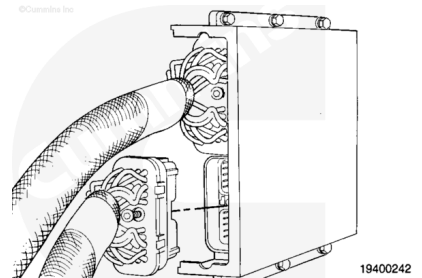


Fasten the harness to the harness support brackets using wire ties.

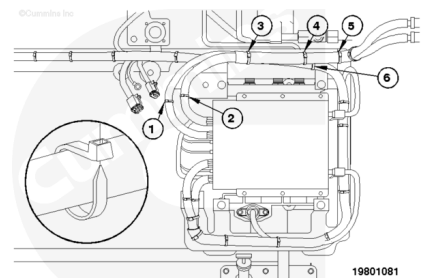


Install the 21-pin and 31-pin connectors to the harness support brackets.

Torque Value: 16 n•m [12 ft-lb]

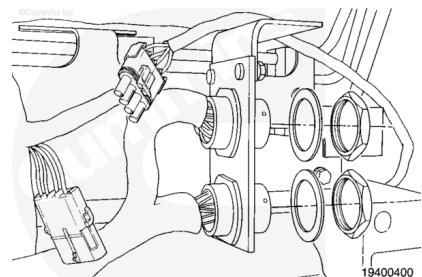

Connect the 21-pin and 31-pin connectors to the OEM harness.

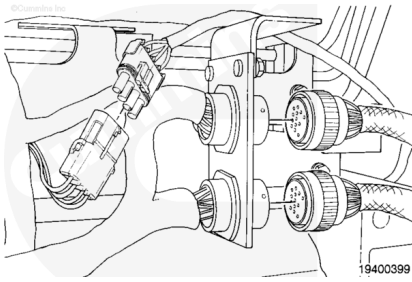

Connect the 2-pin and 6-pin Deutsch connectors.

