



Trainings ▾

Remove


Disconnect the 21-pin and 31-pin connectors from the OEM harness.

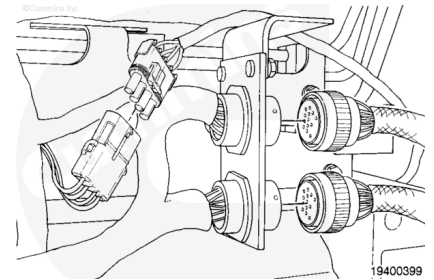


Disconnect the 2-pin and 6-pin Deutsch connectors.

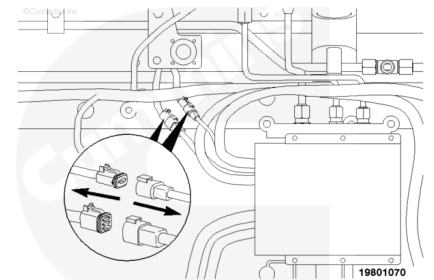


Remove the 21-pin and 31-pin connectors from the harness support brackets.

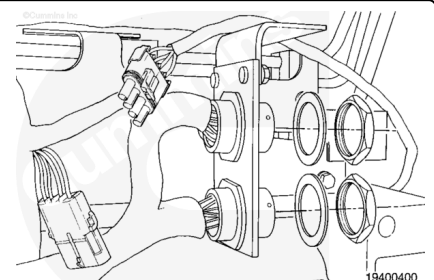

Use a 4 mm [5/32 inch] hex head wrench to disconnect the engine harness Deutsch connector from the ECM.

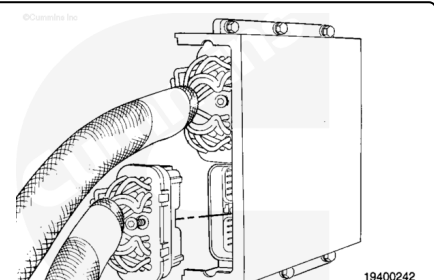

Cut the 6 wire ties from the harness support bracket and remove the OEM interface harness from the engine.

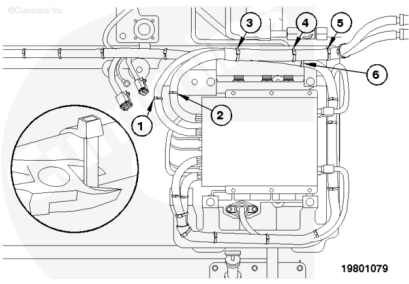

Last Modified: 27-May-2004
