


Trainings ▾


Clean

Use a strong solution of hot water and detergent to clean the cylinder bores.

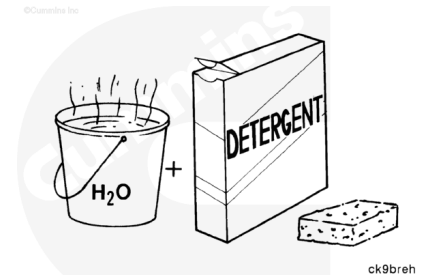

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause bodily injury.

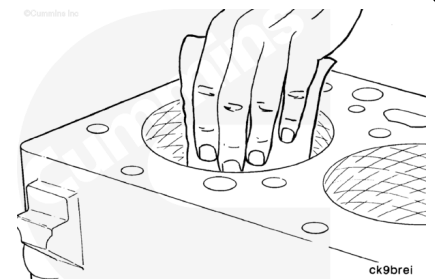


Note : Clean the cylinder bores immediately after being deglazed.

Rinse the cylinder bores until the detergent is removed.

Dry the cylinder block with compressed air.

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to avoid personal injury.

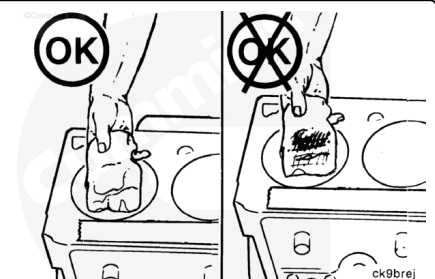

Note : Remove the tape that covers the tappet and lubricating oil holes after the cleaning process is complete.

Check the cylinder bore cleanliness by wiping them with a white, lint-free, lightly oiled cloth.

If grit residue is still present, repeat the cleaning process until all residue is removed.


Wash the cylinder bores with solvent.

Dry the cylinder block with compressed air.

Note : Remove the covering from the piston cooling nozzles.

Remove the protective tape and cloth from the crankshaft journals.

Clean the crankshaft journals.

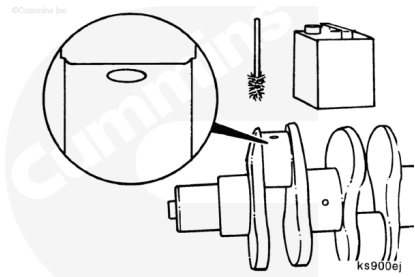


⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to avoid personal injury.

Use solvent and a brush to clean any residue that possibly splashed on the camshaft.


Note : Inspect the camshaft lobes and tappet faces for signs of wear or damage. Refer to Procedure 001-008 (/qs3/pubsys2/xml/en/procedures/41/41-001-008.html).

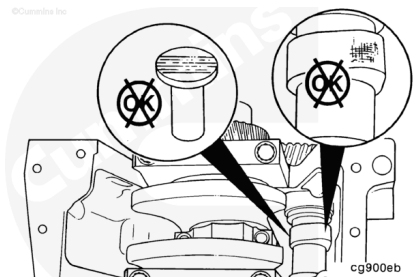

Inspect for Reuse

Measure the cylinder bore diameter at 25.4 mm [1 in] and 170.7 mm [5.5 in] from the top of the cylinder block.

	mm		in	
Bore Inner Diameter	114.00	MIN	4.488	
	114.04	MAX	4.990	
Bore Out of Round		0.08	MAX	0.003

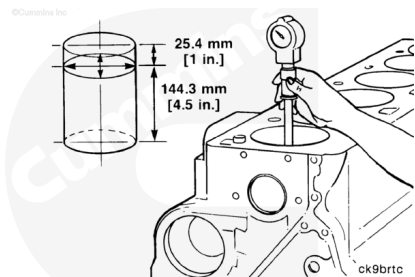

Bore Taper		0.02	MAX	0.001
---------------	--	------	-----	-------

Note : Do not proceed with in chassis overhaul if the cylinder bores are worn beyond specifications.

Last Modified: 13-May-2003
