


Trainings ▾

General Information

⚠ CAUTION ⚠

The AFC is a performance part and must not be tampered with after adjustment at the factory. Tampering with the AFC can cause poor fuel economy and failure to meet regulatory emissions laws.

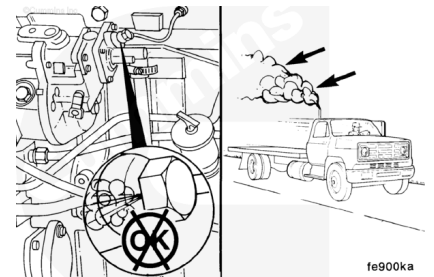


The RSV, RQV, and RQVK governors are equipped with an air-fuel control (AFC) device to help control emissions. The AFC regulates the fuel-to-air mixture by sensing manifold pressure. A malfunction of the AFC can cause low power and excessive exhaust smoke under load. Leaks at the fittings or a restriction in the tube from the intake manifold to the AFC can also cause low power and excessive smoke.

Manual Shutdown Levers

The mechanical shutdown lever is located on the governor. These levers are spring-loaded in the run position except the electrical direct link shutdown solenoid. **Not** all applications will use these manual shutdown controls.

Note : Partial actuation of the mechanical shutdown lever will affect fuel flow and engine power.

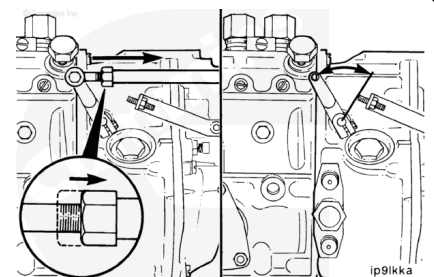

Low power or the inability to stop the engine with the manual shutdown control can be corrected by adjusting the cable/rod length to permit stop-to-stop lever travel.

