


Trainings ▾

Initial Check

Install a fitting at the inlet of the transfer pump.

Install a vacuum gauge, Part No. 3375274.


mm-hg		in-hg
0 to 508	MIN	0 to 20

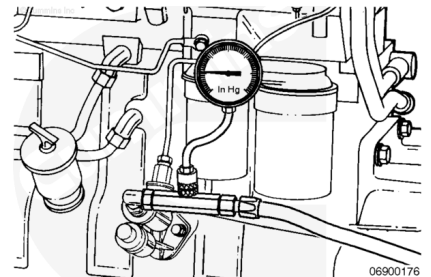

Start the engine.

Run at low or high idle.

mm-hg		in-hg
101.6	MAX	4.70

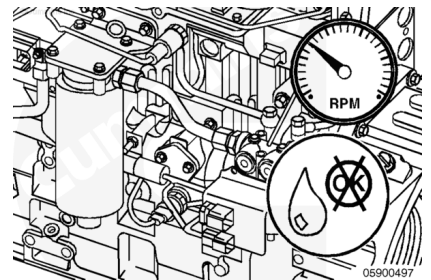

If the fuel inlet restriction is above specification, check the OEM fuel lines from the fuel tank for proper size, kinks and bends, and clogged fuel lines.

Make sure there are no clogged fuel strainers or malfunctioning check valves.

