


Trainings ▾

Remove

Remove the coolant vent line.

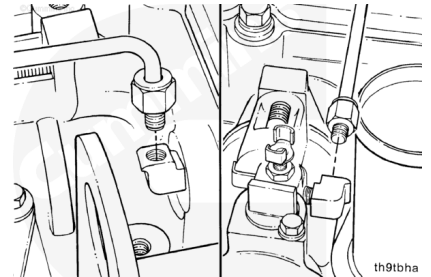

Install

Coat the threads of the coolant vent line with Teflon™.

Install the coolant vent line.

Tighten the coolant vent line fittings.

Torque Value: 8 n•m [71 in-lb]

