


Trainings ▾


Measure

Measure the turbocharger shaft end play. Reference the Turbocharger Manual, Bulletin 3810321.

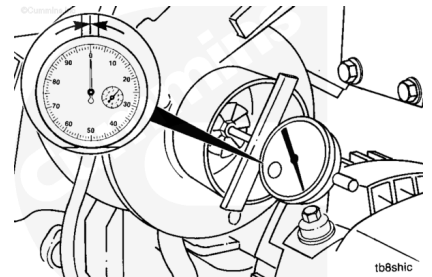

Measure axial clearance of the turbocharger shaft.

Turbocharger Axial Clearance		
mm		in
0.025	MIN	0.001
0.127	MAX	0.005

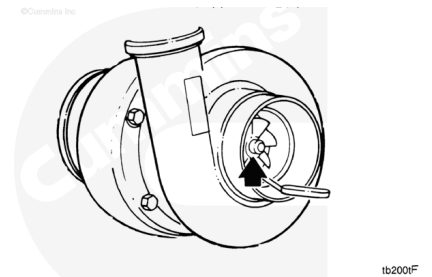

The turbocharger **must** be replaced if the clearances are beyond these limits. Refer to Procedure 010-033 in Section 10 (</qs3/pubsys2/xml/en/procedures/41/41-010-033-tr.html>).