

Trainings ▾

Measure


Measure boost pressure at the intake manifold. Use one of the tapped or plugged intake access holes shown in the illustration.

Refer to the specifications in Procedure 018-019 (Air Intake System) in Section V.

(/qs3/pubsys2/xml/en/procedures/41/41-018-019-tr.html)

If the specifications for the engine are **not** listed, see the engine data sheet.

Note : If the engine has charge-air-cooling, the charge-air-cooler **must** be tested for leaks and turbocharger boost pressure restriction. Refer to Procedure 010-027 (Charge-Air Cooler) in Section 10 for charge-air-cooler testing. (/qs3/pubsys2/xml/en/procedures/100/100-010-027-tr.html)

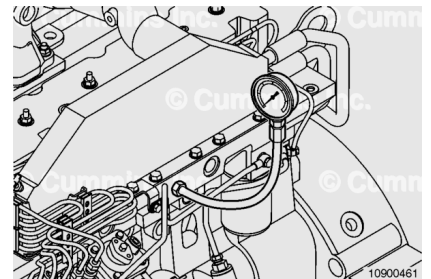

Exhaust leaks can typically be detected audibly, or visually by a discoloration caused by escaping hot gases.

Exhaust restriction can cause low power. If exhaust gases can **not** flow freely, the turbocharger will **not** operate efficiently.

