


Trainings ▾

Measure


Automotive, Industrial, and Generator Drive

Install pressure gauge, Part Number ST 1273, to the pressure tap in the exhaust head pipe or at the inlet to the catalyst or muffler assembly.

Operate the engine at rated speed and load. Record the exhaust restriction.

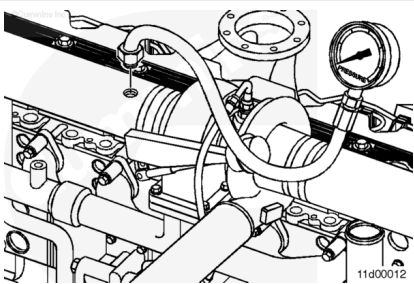

If restriction exceeds specification, inspect the oxidation catalyst and/or muffler and replace according to vehicle manufacturer instructions.

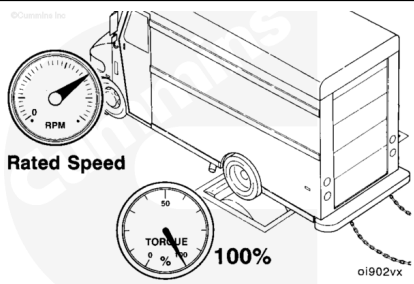


	mm-hg		in-hg	
1996 EPA Certifica tion with Oxidatio n Catalyst	61	MIN	2.4	
1996 EPA Certifica tion with Oxidatio n Catalyst		101	MAX	4
1995 EPA Certifica tion with Oxidatio n Catalyst	61	MIN	2.4	

1995 EPA Certifica tion with Oxidatio n Catalyst		127	MAX	5
All others with or without Oxidatio n Catalyst	61	MIN	2.4	
All others with or without Oxidatio n Catalyst		127	MAX	5

Remove the test equipment.


Install the pipe plug.

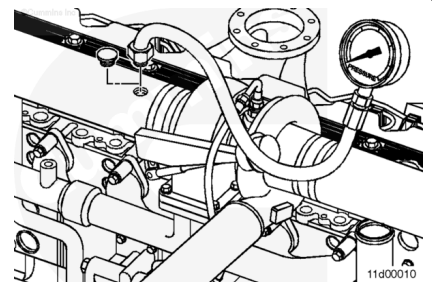

Marine Applications

Connect a manometer to the turbocharger exhaust connection.

Use a minimum of 305 mm [12 in] of metal tubing extending from the exhaust connection to protect the hose from heat.

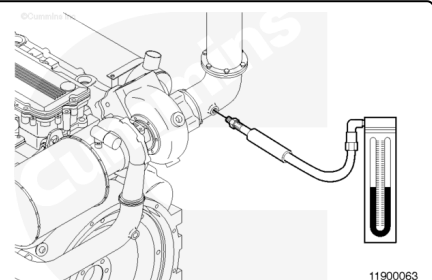


Operate the engine at rated rpm and load.

Record the reading on the manometer.


mm		in
75	MAX	3

mm		in
1016	MAX	40

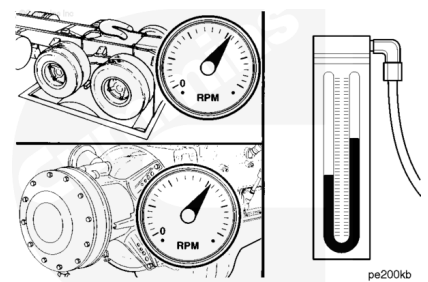

If exhaust restriction exceeds specifications, inspect the exhaust system for damage.

Refer to the original equipment manufacturer (OEM) repair instructions.

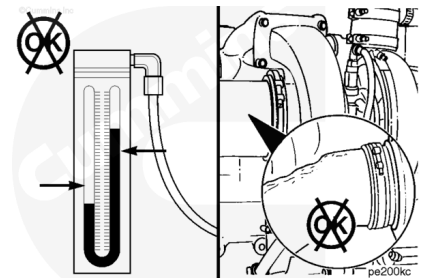

Remove manometer from the turbocharger exhaust connection.

