


Trainings ▾

Test

⚠ CAUTION ⚠


Refer to General Engine Test Procedures - (Chassis Dynamometer) (014-002 (/qs3/pubsys2/xml/en/procedures/100/100-014-002.html)) before operating the engine to avoid internal component damage.

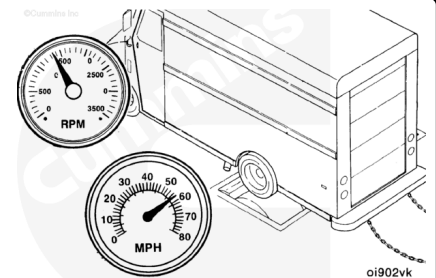

Note : Operate the vehicle in a gear that produces a road speed of 90 to 95 km/h [55 to 60 mph].


Operate the engine at 1200 rpm and 25 percent of torque peak load until the water temperature reaches 70°C [160°F].

Check all of the gauges, and record the readings.

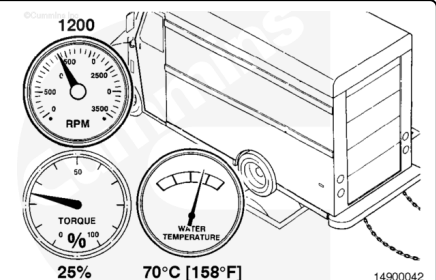


Operate the engine at 1200 rpm and 40 percent of torque peak load for 2 minutes.

Check all of the gauges, and record the readings.

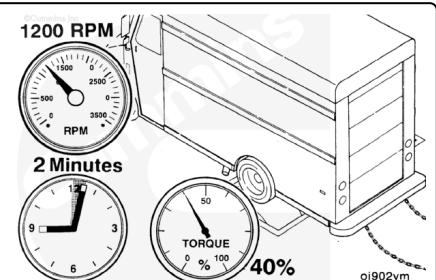

Operate the engine at 1600 rpm and 65 percent of torque peak load for 5 minutes.


Check all of the gauges, and record the readings.

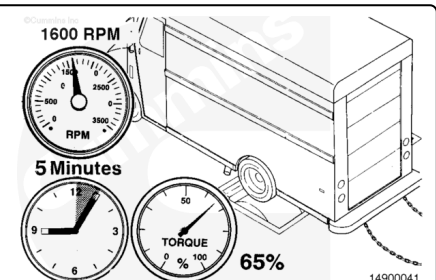

Operate the engine at torque peak rpm and full load for 4 minutes.

Check all of the gauges, and record the readings.

Note : Refer to the engine data sheet for the torque peak rpm of the engine model being tested.

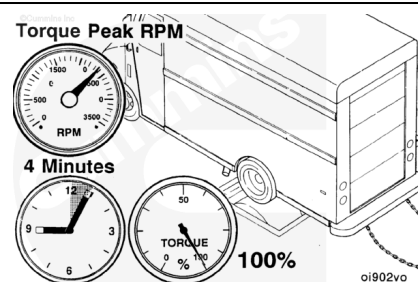


Operate the engine at rated speed (rpm) and full load for 4 minutes.

Check all of the gauges, and record the readings. Compare the readings to those published on the appropriate engine data sheet.

⚠ CAUTION ⚠

Do not shut off the engine immediately after the run-in is completed. Allow the engine to cool by operating it at low idle for a minimum of 3 minutes to avoid internal component damage.

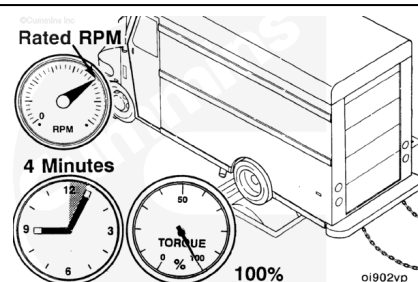

Make sure to remove all dynamometer instrumentation from the vehicle.