


Trainings ▾

Calibrate

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and can cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil.

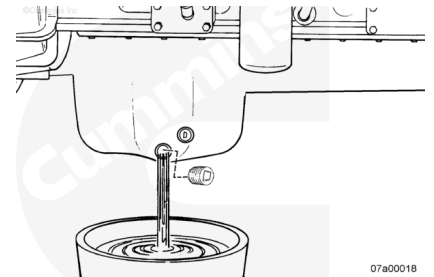

⚠ WARNING ⚠


Used engine oil must be disposed of in accordance with local environmental regulations.

Drain the lubricating oil. Refer to Procedure 007-025 (</qs3/pubsys2/xml/en/procedures/57/57-007-025-tr.html>).

Install the dipstick in the dipstick tube.

Note : The dipstick utilizes a lock-clip handle, requiring a 1/4 turn in either direction to install completely.


Measure clean 15W-40 oil to fill the oil pan to the specified low level. Refer to Procedure 018-017 (</qs3/pubsys2/xml/en/procedures/57/57-018-017.html>) the lubricating oil system specifications in Section V.

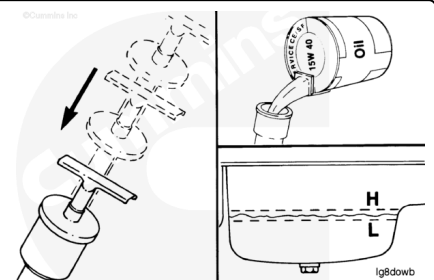

Remove the dipstick and scribe a mark across the dipstick at the oil level. Mark the low level with an L.

Note : The dipstick utilizes a lock-clip handle, requiring a 1/4 turn in either direction to remove.


Note : The dipstick will break if the scribe mark is too deep.

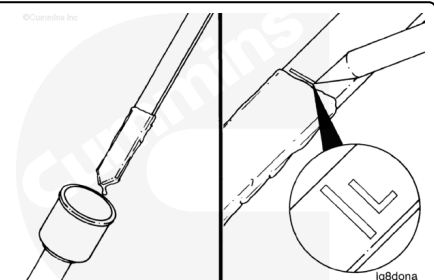

Install the dipstick.

Note : The dipstick utilizes a lock-clip handle, requiring a 1/4 turn in either direction to install completely.

Measure and add additional oil to the oil pan to specified full level. Refer to Procedure 018-017 (</qs3/pubsys2/xml/en/procedures/57/57-018-017.html>) the lubricating oil system specifications in Section V.

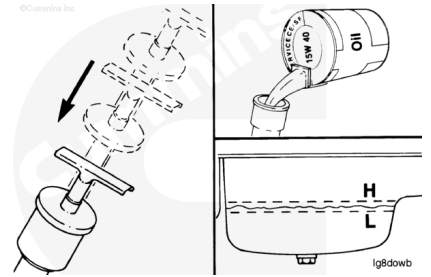

Remove the dipstick and scribe a mark across the dipstick at the oil level. Mark the high oil level with an H.

Note : The dipstick utilizes a lock-clip handle, requiring a 1/4 turn in either direction to remove.

Note : The dipstick will break if the scribe mark is too deep.

