

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or stream can cause personal injury.

- Drain the cooling system. Refer to Procedure 008-018 (Cooling System) in Section 8 of the QST30 Service Manual, Bulletin 4021539.
(/qs3/pubsys2/xml/en/procedures/57/57-008-018.html)

©Cummins Inc.




ck800wa

Remove

Note : The QSK19 engine is used in the following illustrations. The remove and install steps are the same.


Disconnect the engine harness from the coolant pressure sensor.

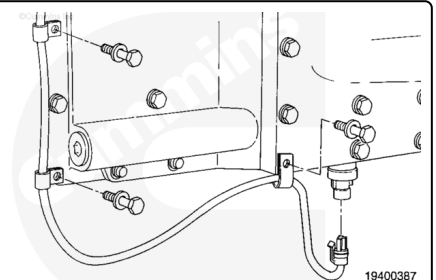

19400387

Remove the coolant pressure sensor.

Use the Deep Well Socket, Part Number 3823843, to remove the coolant pressure sensor.

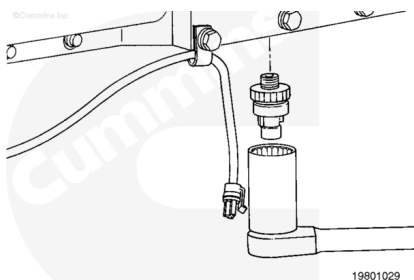


Test

Connect the INSITE™ electronic service tool to the data link.



Connect the engine harness to the coolant pressure sensor.
Allow the sensor and harness to hang in the air.

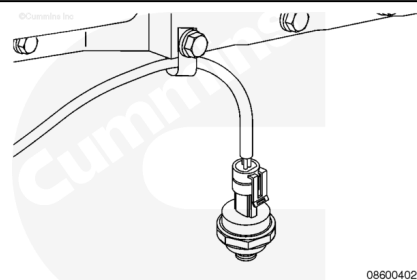

Monitor the coolant pressure sensor with the electronic service tool.

The coolant pressure **must** be within 17.2 kPa [2.5 psi] of the barometric pressure sensor value.

If the coolant pressure is **not** within specifications, the coolant pressure sensor **must** be replaced.

Disconnect INSITE™ electronic service tool.

Disconnect the coolant pressure sensor from the engine harness.




Install


Install the coolant pressure sensor into the thermostat housing.

Tighten the coolant pressure sensor.

Torque Value: 14 n•m [124 in-lb]

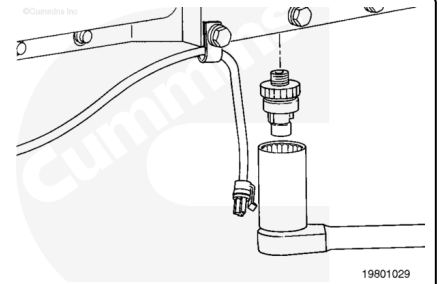

Connect the engine harness to the coolant pressure sensor.

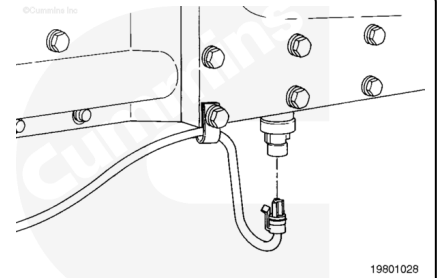

Finishing Steps

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

- Fill the cooling system. Refer to Procedure 008-018 (Cooling System) in Section 8 of the QST30 Service Manual, Bulletin 4021539.
(</qs3/pubsys2/xml/en/procedures/57/57-008-018.html>)

