


Fault Code: 144

Engine Coolant Temperature 1 Sensor Circuit - Voltage Above Normal or Shorted to High Source

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 144 PID(P): P110 SPN: 110 FMI: 3/3 Lamp: Amber SRT:	High signal voltage or open circuit detected at engine coolant temperature circuit.	Fan will stay ON if controlled by the engine control module (ECM).

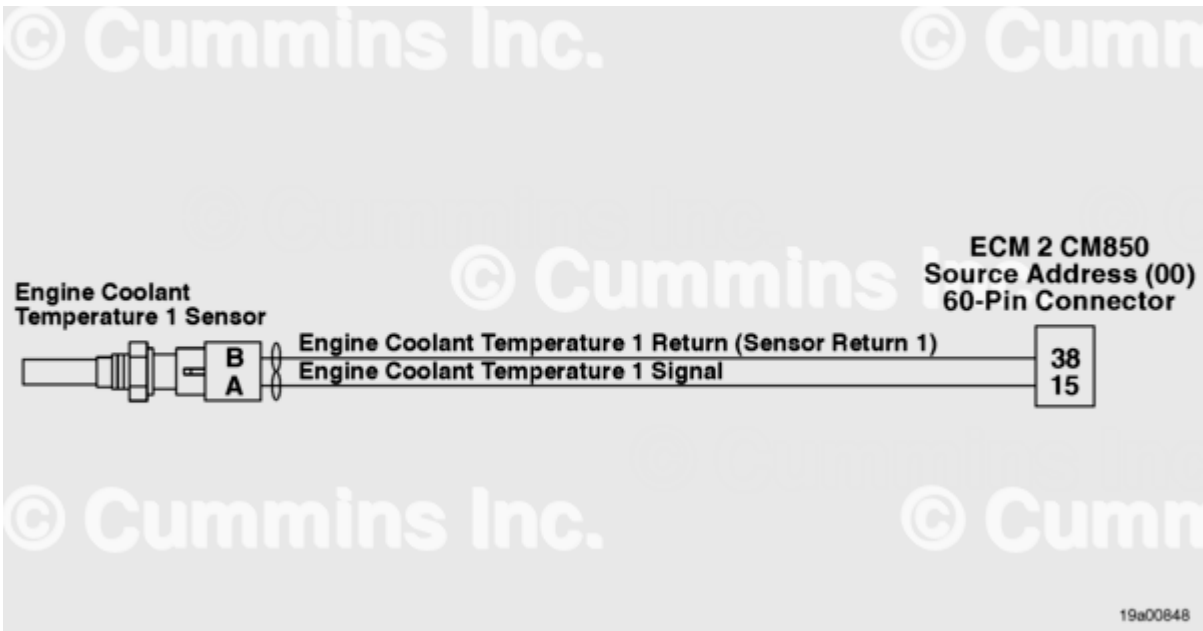

Engine Coolant Temperature Sensor Circuit

Circuit Description

The engine coolant temperature sensor is a variable resistor sensor used by the ECM to monitor the engine coolant temperature. The engine coolant temperature sensor has two circuits: signal, and return circuits. The signal voltage indicates the coolant temperature.

Component Location

The engine coolant temperature sensor is located on the thermostat housing.

Conditions For Running The Diagnostics

This diagnostic runs continuously when the generator set controller is active or when the engine is running.

Conditions For Setting The Fault Codes

The Engine Control Module (ECM) detected that the engine coolant temperature sensor signal voltage was out of range high.

Action Taken When The Fault Code Is Active

- The generator set controller displays a warning fault immediately when the diagnostics runs and fails.
- A default value is used for the engine coolant temperature reading.

Conditions For Clearing The Fault Code

- To validate the repair, start the engine and let it run for 1 minute at no load.
- The generator set controller will turn off the warning indicator immediately after the user presses reset.
- The "Reset All Faults" command in the recommended Cummins® electronic service tool or equivalent can be used to clear active faults.

Shoptalk

Possible causes of this fault code include:

- Malfunctioning engine coolant temperature sensor
- Malfunctioning or damaged engine wiring harness.

Refer to Troubleshooting Fault Code 144 . (</qs3/pubsys2/xml/en/procedures/60/60-t05-144.html>)