

Fault Code: 1597


Engine Control Module Critical Internal Failure - Bad Intelligent Device or Component

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 1597 PID(P): S254 SPN: 629 FMI: 12/12 Lamp: Maintenance SRT:	Internal ECM failure has been detected.	Engine may not start or may be difficult to start.

©Cummins Inc

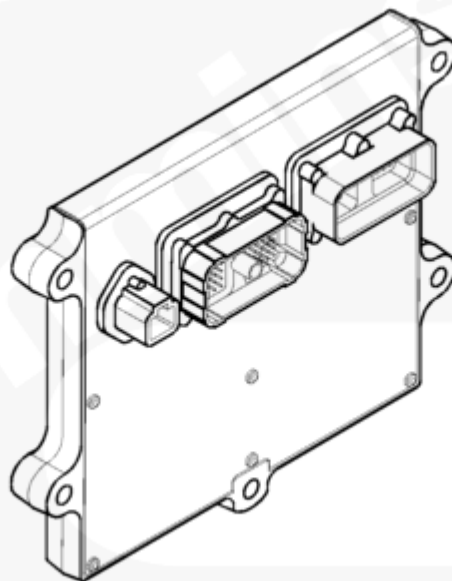

19c01042

Engine Control Module (ECM)

Circuit Description

The Engine Control Module (ECM) is a computer that is responsible for engine control, diagnostics, and user features. The ECM has internal diagnostics that continuously run and check the internal memory.

Component Location

The Engine Control Modules (ECM) are located on a plate that is above the flywheel housing.

Conditions For Running The Diagnostics

This diagnostic runs continuously when the generator set controller is active.

Conditions For Setting The Fault Codes

The Engine Control Module (ECM) detected a read or write error internal to the ECM.

Action Taken When The Fault Code Is Active

- The generator set controller displays a warning fault immediately when the diagnostics runs and fails.

Conditions For Clearing The Fault Code

- To validate the repair, start the engine and let it run for 1 minute at no load.
- The generator set controller will turn off the warning indicator immediately after the user presses reset.
- The "Reset All Faults" command in the recommended Cummins® electronic service tool or equivalent can be used to clear active faults.

Shoptalk

Each ECM has an individual source address that displays when the recommended Cummins® electronic service tool or equivalent is connected. When troubleshooting a fault code, use the source address displayed in the recommended Cummins® electronic service tool or equivalent to determine which ECM and circuit is affected.

Possible causes of this fault code include:

- Internal ECM failure.

Refer to Troubleshooting Fault Code 1597 . (</qs3/pubsys2/xml/en/procedures/60/60-t05-1597.html>)