


Fault Code: 173

Fuel Rack Actuator Driver Mechanically Stuck Closed - Data Valid But Below Normal Operating Range - Moderately Severe Level

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 173 PID(P): S23 SPN: 638 FMI: 1/18 Lamp: Amber SRT:	Fuel control rack is in a stuck position.	Possible reduced engine performance.

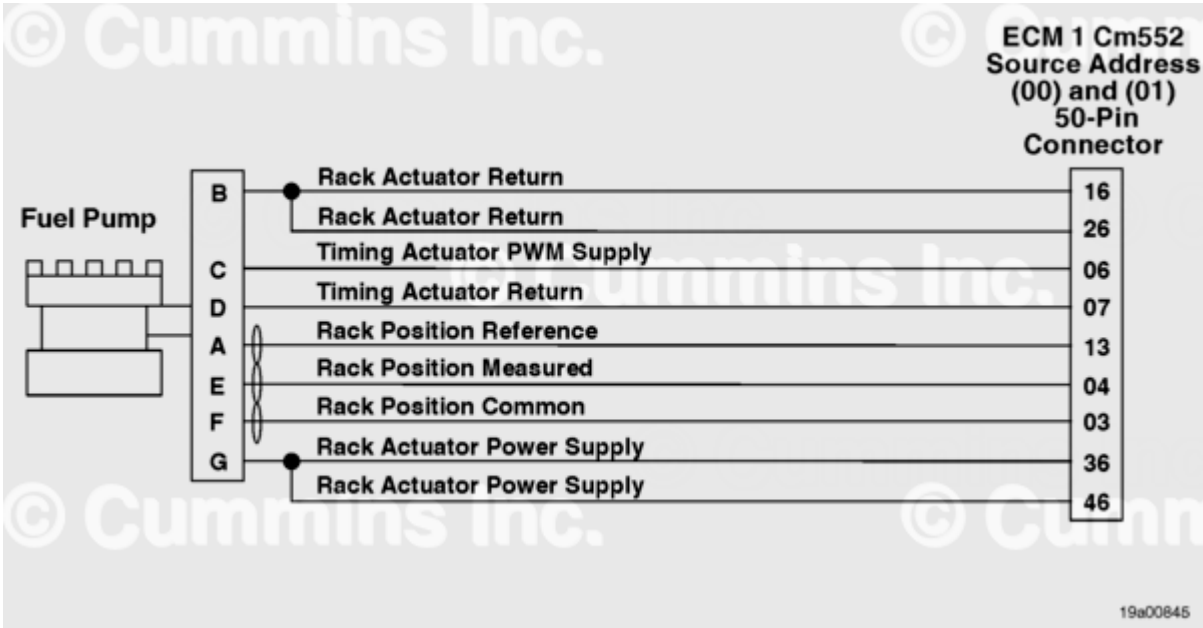

Fuel Rack Actuator Driver Circuit

Circuit Description

The fuel control rack and solenoid determine the quantity of fuel metered to the engine.

Component Location

The fuel control rack and solenoid are internal parts of the fuel injection pump.

Conditions For Running The Diagnostics

This diagnostic runs continuously when the generator set controller is active or when the engine is running.

Conditions For Setting The Fault Codes

The Engine Control Module (ECM) detected the fuel rack is stuck or **not** responding to fueling commands.

Action Taken When The Fault Code Is Active

- The generator set controller displays a warning fault immediately when the diagnostics runs and fails.

Conditions For Clearing The Fault Code

- To validate the repair, start the engine and let it run for 1 minute at no load.
- The generator set controller will turn off the warning indicator immediately after the user presses reset.
- The “Reset All Faults” command in the recommended Cummins® electronic service tool or equivalent can be used to clear active faults.

Shoptalk

Possible causes of this fault code include:

- Loose or damaged actuator connector.
- Malfunctioning fuel pump.

Refer to Troubleshooting Fault Code 173 . (</qs3/pubsys2/xml/en/procedures/60/60-t05-173.html>)