


# Fault Code: 212

## Engine Oil Temperature Sensor 1 Circuit - Voltage Above Normal or Shorted to High Source

 Printable Version

### Overview

| Codes                                                                                                     | Reason                                                                                        | Effect                      |
|-----------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------|-----------------------------|
| <p>Fault Code: 212</p> <p>PID(P): P175</p> <p>SPN: 175</p> <p>FMI: 3/3</p> <p>Lamp: Amber</p> <p>SRT:</p> | <p>High signal voltage or an open circuit detected at the engine oil temperature circuit.</p> | <p>None on performance.</p> |

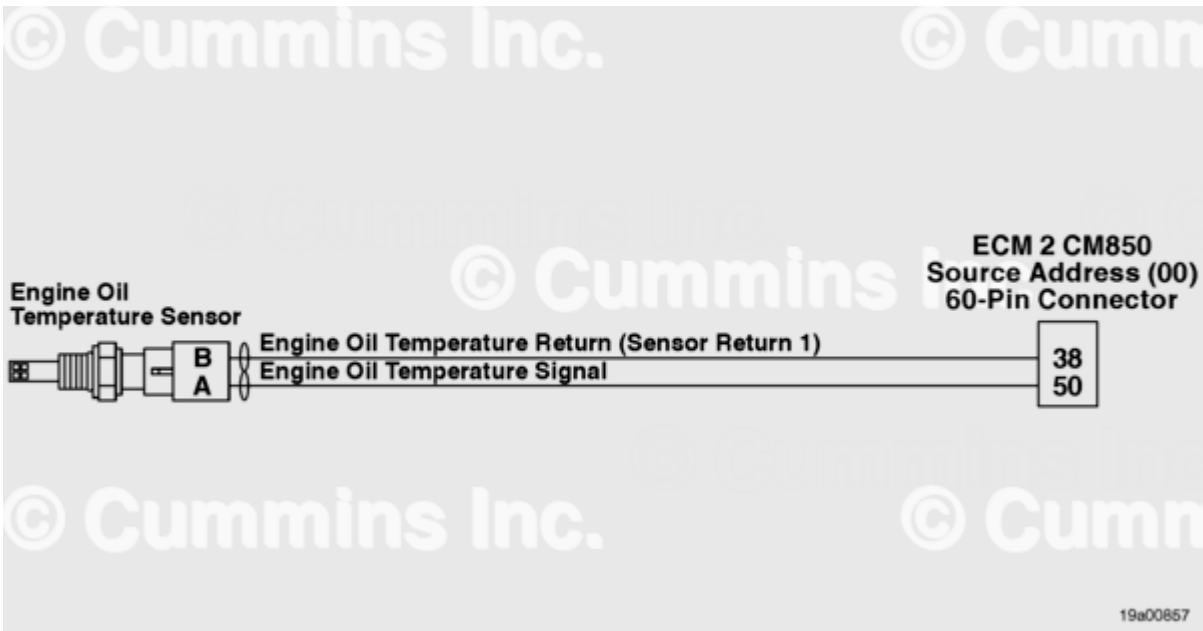

Engine Oil Temperature Sensor Circuit

### Circuit Description

The engine oil temperature sensor is a variable resistor sensor used by the ECM to monitor the engine oil temperature. The engine oil temperature sensor has two circuits: signal, and return circuits. The signal voltage indicates the engine oil temperature.

## Component Location

The engine oil temperature sensor is located in the oil pan adapter on the left bank.

## Conditions For Running The Diagnostics

This diagnostic runs continuously when the generator set controller is active or when the engine is running.

## Conditions For Setting The Fault Codes

The Engine Control Module (ECM) detected the engine oil temperature sensor signal voltage was out of range high.

## Action Taken When The Fault Code Is Active

- The generator set controller displays a warning fault immediately when the diagnostics runs and fails.
- No engine protection for engine oil temperature.
- A default value for the engine oil temperature reading is used.

## Conditions For Clearing The Fault Code

- To validate the repair, start the engine and let it run for 1 minute at no load.
- The generator set controller will turn off the warning indicator immediately after the user presses reset.
- The "Reset All Faults" command in the recommended Cummins® electronic service tool or equivalent can be used to clear active faults.

## Shoptalk

Possible causes of this fault code include:

- A malfunctioning or damaged engine oil temperature sensor.
- Malfunctioning or damaged engine wiring harness.

Refer to Troubleshooting Fault Code 212 . (</qs3/pubsys2/xml/en/procedures/60/60-t05-212.html>)