


Fault Code: 213

Engine Oil Temperature Sensor 1 Circuit - Voltage Below Normal or Shorted to Low Source

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 213 PID(P): P175 SPN: 175 FMI: 4/4 Lamp: Amber SRT:	Low signal voltage detected at engine oil temperature sensor circuit.	None on performance.

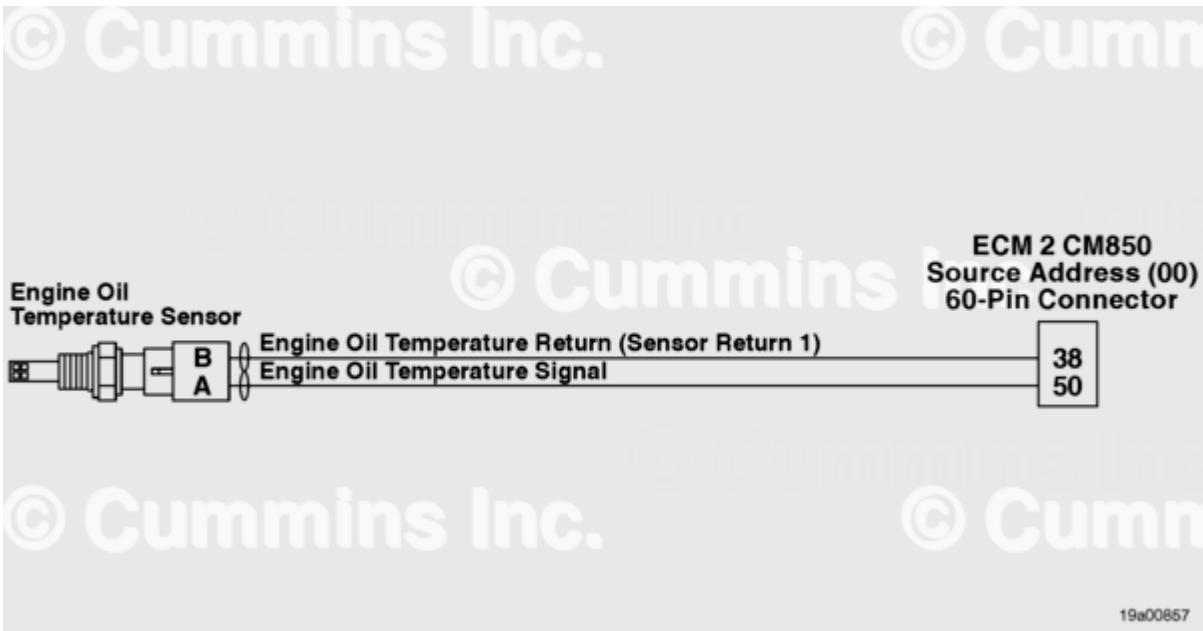

Engine Oil Temperature Sensor Circuit

Circuit Description

The engine oil temperature sensor is a variable resistor sensor used by the ECM to monitor the engine oil temperature. The engine oil temperature sensor has two circuits: signal, and return circuits. The signal voltage indicates the engine oil temperature.

Component Location

The engine oil temperature sensor is located in the oil pan adapter on the left bank.

Conditions For Running The Diagnostics

This diagnostic runs continuously when the generator set controller is active or when the engine is running.

Conditions For Setting The Fault Codes

The Engine Control Module (ECM) detected the engine oil temperature sensor signal voltage was out of range low.

Action Taken When The Fault Code Is Active

- The generator set controller displays a warning fault immediately when the diagnostics runs and fails.
- A default value for the engine oil temperature reading is used.

Conditions For Clearing The Fault Code

- To validate the repair, start the engine and let it run for 1 minute at no load.
- The generator set controller will turn off the warning indicator immediately after the user presses reset.
- The "Reset All Faults" command in the recommended Cummins® electronic service tool or equivalent can be used to clear active faults.

Shoptalk

Possible causes of this fault code include:

- Malfunctioning or damaged engine wiring harness.
- A malfunctioning or damaged engine oil temperature sensor.

Refer to Troubleshooting Fault Code 213 . (</qs3/pubsys2/xml/en/procedures/60/60-t05-213.html>)