


Fault Code: 214

Engine Oil Temperature - Data Valid But Above Normal Operating Range - Most Severe Level

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 214 PID(P): P175 SPN: 175 FMI: 0/0 Lamp: Red SRT:	Engine oil temperature is above the engine protection limit.	Engine will shut down.

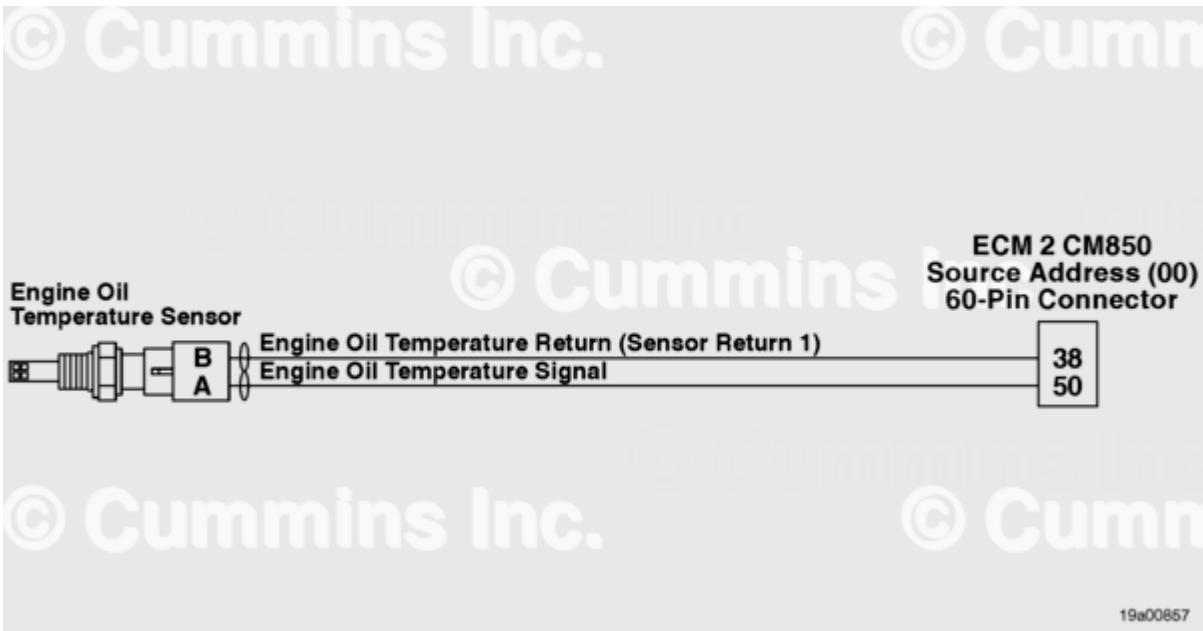

Engine Oil Temperature Sensor Circuit

Circuit Description

The engine oil temperature sensor is a variable resistor sensor used by the ECM to monitor the engine oil temperature. The engine oil temperature sensor has two circuits: signal, and return circuits. The signal voltage indicates the engine oil temperature.

Component Location

The engine oil temperature sensor is located in the oil pan adapter on the left bank.

Conditions For Running The Diagnostics

This diagnostic runs continuously when the engine is running.

Conditions For Setting The Fault Codes

The Engine Control Module (ECM) detected the engine oil temperature was greater than the engine protection limit.

Action Taken When The Fault Code Is Active

- The generator set controller displays a shutdown fault immediately when the diagnostics runs and fails.
- The torque output of the engine will be reduced.
- The engine will be shut down.

Conditions For Clearing The Fault Code

- To validate the repair, bring the engine up to operating temperature and run it in normal loaded conditions for 15 minutes.
- The generator set controller will turn off the shutdown indicator immediately after the user presses the reset.
- The "Reset All Faults" command in the recommended Cummins® electronic service tool or equivalent can be used to clear active faults.

Shoptalk

Possible causes of this fault code include:

- Malfunctioning lubricating oil cooler.
- A malfunctioning or damaged engine oil temperature sensor.

Refer to Troubleshooting Fault Code 214 . (</qs3/pubsys2/xml/en/procedures/60/60-t05-214.html>)