


Fault Code: 254

Engine Fuel Shutoff Valve Driver Circuit - Voltage Below Normal or Shorted to Low Source

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 254 PID(P): S17 SPN: 632 FMI: 4/4 Lamp: Red SRT:	Low voltage detected on the fuel shutoff control circuit.	Engine will shut down.

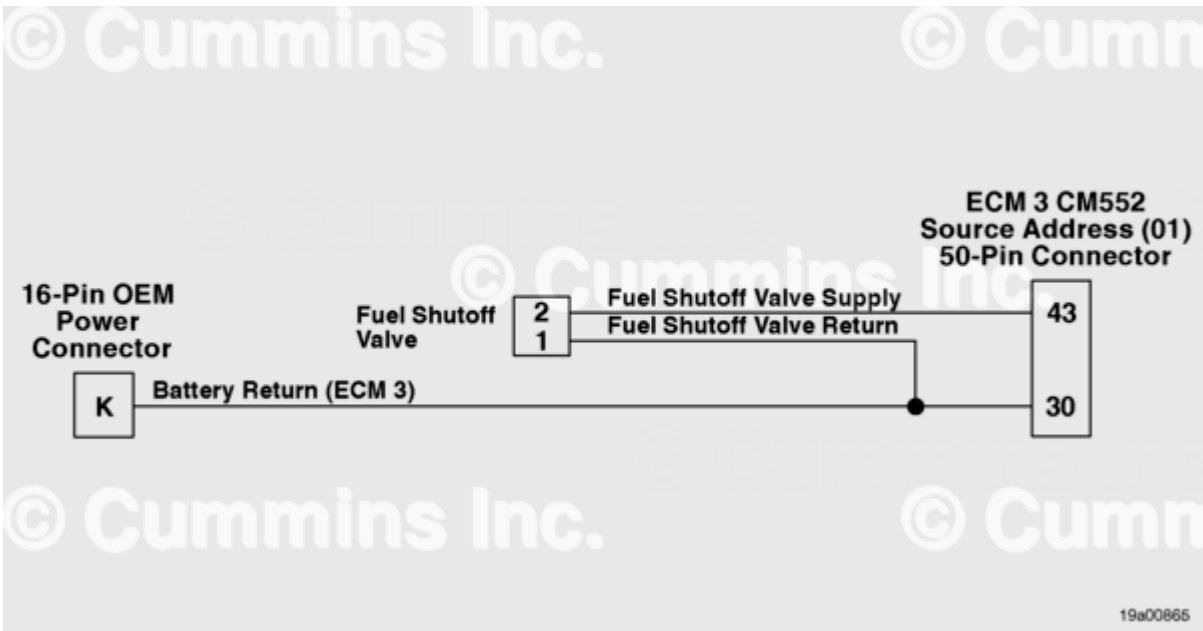

Fuel Shutoff Valve

Circuit Description

The fuel shutoff valve is a device used by the ECM to control the fuel supply into the injection pump.

Component Location

The fuel shutoff valves are located on the oil pan rail near the middle of the block on both banks.

Conditions For Running The Diagnostics

This diagnostic runs when the fuel shutoff valve is commanded ON.

Conditions For Setting The Fault Codes

The Engine Control Module (ECM) has detected the fuel shutoff control is out of range low.

Action Taken When The Fault Code Is Active

- The generator set controller displays a shutdown fault immediately when the diagnostics runs and fails.
- The engine will be shut down.

Conditions For Clearing The Fault Code

- To validate the repair, start the engine and let it run for 1 minute at no load.
- The generator set controller will turn off the shutdown indicator immediately after the user presses the reset.
- The "Reset All Faults" command in the recommended Cummins® electronic service tool or equivalent can be used to clear active faults.

Shoptalk

Each ECM has an individual source address that displays when the recommended Cummins® electronic service tool or equivalent is connected. When troubleshooting a fault code, use the source address displayed in the recommended Cummins® electronic service tool or equivalent to determine which ECM and circuit is affected.

Possible causes of this fault code include:

- Malfunctioning or damaged engine wiring harness.
- A malfunctioning fuel shutoff valve.
- Damaged or loose connections.

Refer to Troubleshooting Fault Code 254 . (</qs3/pubsys2/xml/en/procedures/60/60-t05-254.html>)

