


Fault Code: 2662

At Least One Unacknowledged Moderately Severe Fault - Condition Exists

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 2662 PID(P): SPN: 629 FMI: 11/31 Lamp: Amber SRT:	One or more unacknowledged moderately severe fault codes has been detected.	None on performance.

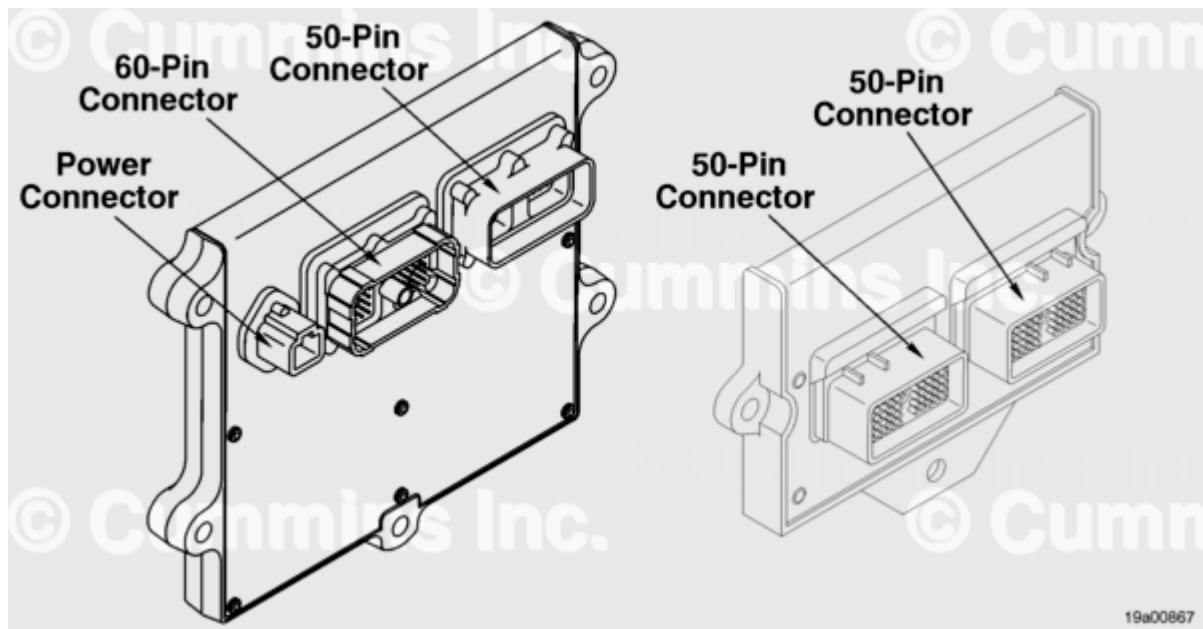

Engine Control Module (ECM)

Circuit Description

The Engine Control Module (ECM) is a computer that is responsible for engine control, diagnostics, and user features. The ECM has internal diagnostics that continuously run and check the internal memory.

Component Location

The reset button or switch location depends on the original equipment manufacturer (OEM).

Conditions For Running The Diagnostics

This diagnostic runs continuously when the generator set controller is active or when the engine is running.

Conditions For Setting The Fault Codes

The Engine Control Module (ECM) detected a moderately severe fault.

Action Taken When The Fault Code Is Active

- The generator set controller displays a warning fault immediately when the diagnostics runs and fails.

Conditions For Clearing The Fault Code

- To validate the repair, start the engine and let it run for 1 minute at no load.
- The generator set controller will turn off the warning indicator immediately after the user presses reset.
- The “Reset All Faults” command in the recommended Cummins® electronic service tool or equivalent can be used to clear active faults.

Shoptalk

This is an information-only fault code that will **only** become active if other critical engine protection fault codes are active. Fault code will remain active until reset by the operator. The light is an indicator that will remain lit to inform the operator that there has been a fault code generated. The fault has no effect on engine performance.

Refer to Troubleshooting Fault Code 2662 . (</qs3/pubsys2/xml/en/procedures/60/60-t05-2662.html>)