


Fault Code: 611

Engine Shut Down Hot - Condition Exists

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 611 PID(P): S116 SPN: 1383 FMI: 11/31 Lamp: None SRT:	Engine shut down hot without a proper cool down run period.	None on performance.

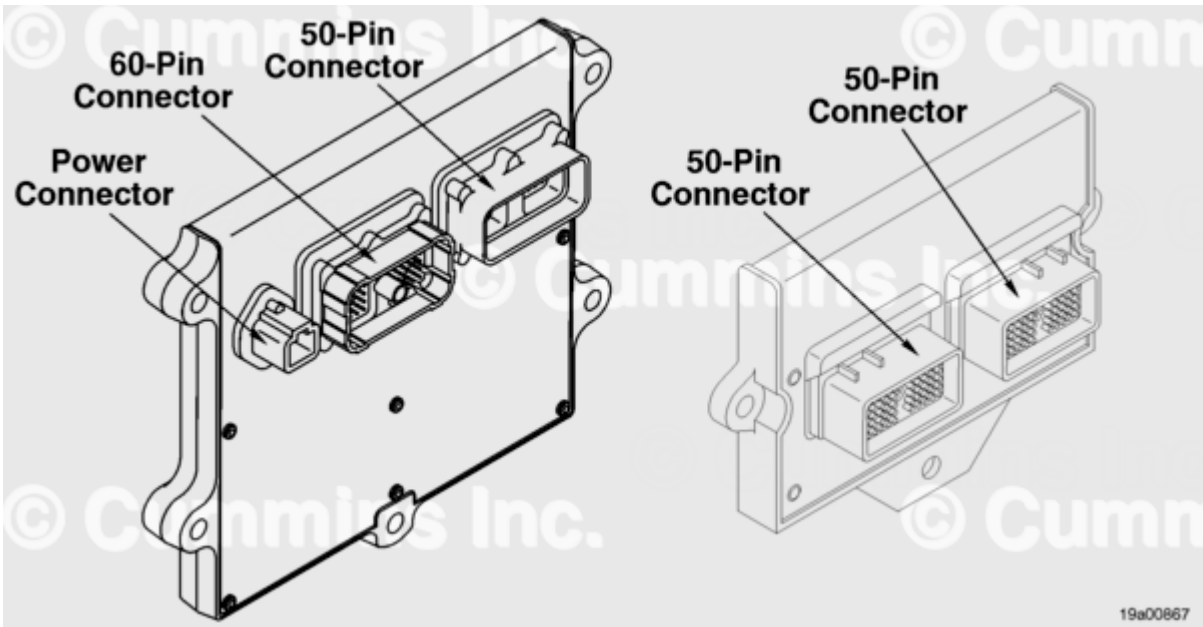

Engine Control Module (ECM)

Circuit Description

The engine control module (ECM) uses inputs from the engine coolant temp sensor, engine speed sensor, keyswitch, and calculated engine torque for this diagnostic.

Component Location

The emergency stop switch is located on the generator set control panel.

The Engine Control Modules (ECM) are located on a plate that is above the flywheel housing.

Conditions For Running The Diagnostics

This diagnostic runs continuously when the engine is running.

Conditions For Setting The Fault Codes

The Engine Control Module (ECM) detected engine speed is 0 within 15 seconds of the engine operating under a load.

Action Taken When The Fault Code Is Active

- The generator set controller displays the fault immediately when the diagnostics runs and fails.

Conditions For Clearing The Fault Code

- To validate the repair, start the engine and let it run for 1 minute at no load.
- The generator set controller will turn off the fault code immediately after the user presses reset.
- The “Reset All Faults” command in the recommended Cummins® electronic service tool or equivalent can be used to clear active faults.

Shoptalk

This is an information **only** fault code that will **only** become active if the engine was shut down before proper engine cooldown.

Refer to Troubleshooting Fault Code 611 . (</qs3/pubsys2/xml/en/procedures/60/60-t05-611.html>)