


Fault Code: 121

Engine Position Sensor Circuit

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 121 PID(P): P190 SPN: 190 FMI: 10/10 Lamp: Yellow SRT:	No engine speed signal detected at one of the engine position sensor circuits.	None on performance.

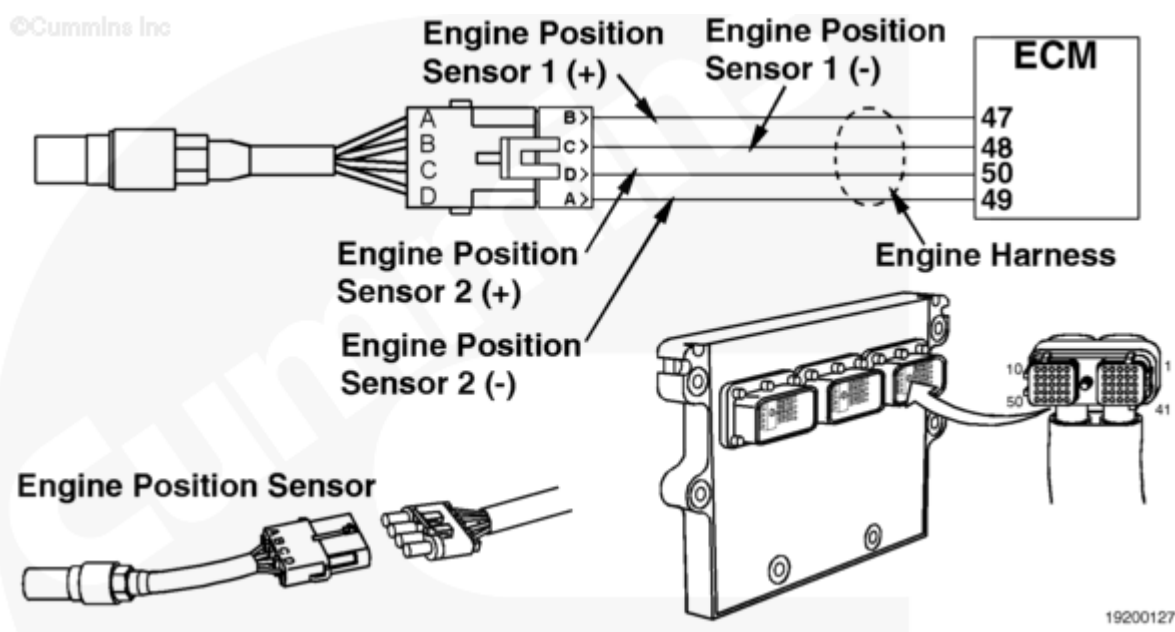

Engine Position Sensor Circuit

Circuit Description

The engine position sensor monitors the engine position and the engine speed and passes this information to the electronic control module (ECM) through the sensor harness.

Component Location

The engine position sensor is located above the accessory drive.

Shoptalk

- If the fault occurs **only** at a certain engine temperature, check the engine position sensor circuit while the engine is at that particular temperature.
- Check the camshaft end play to make sure the camshaft gear is **not** moving too far away from the end of the engine position sensor.
- Check for moisture in the sensor harness connector at the ECM.
- Possible causes for this fault include a damaged engine position sensor, a short circuit to ground, or an open circuit.

Refer to Troubleshooting Fault Code t05-121 (</qs3/pubsys2/xml/en/procedures/82/82-t05-121.html>)

Last Modified: 02-Sep-2010
