


Oil Temperature Sensor Circuit

 [Printable Version](#)

Overview

Codes	Reason	Effect
Fault Code: 212 PID(P): P175 SPN: 175 FMI: 3/3 Lamp: Yellow SRT:	High voltage detected at the oil temperature circuit.	No engine protection for oil temperature.

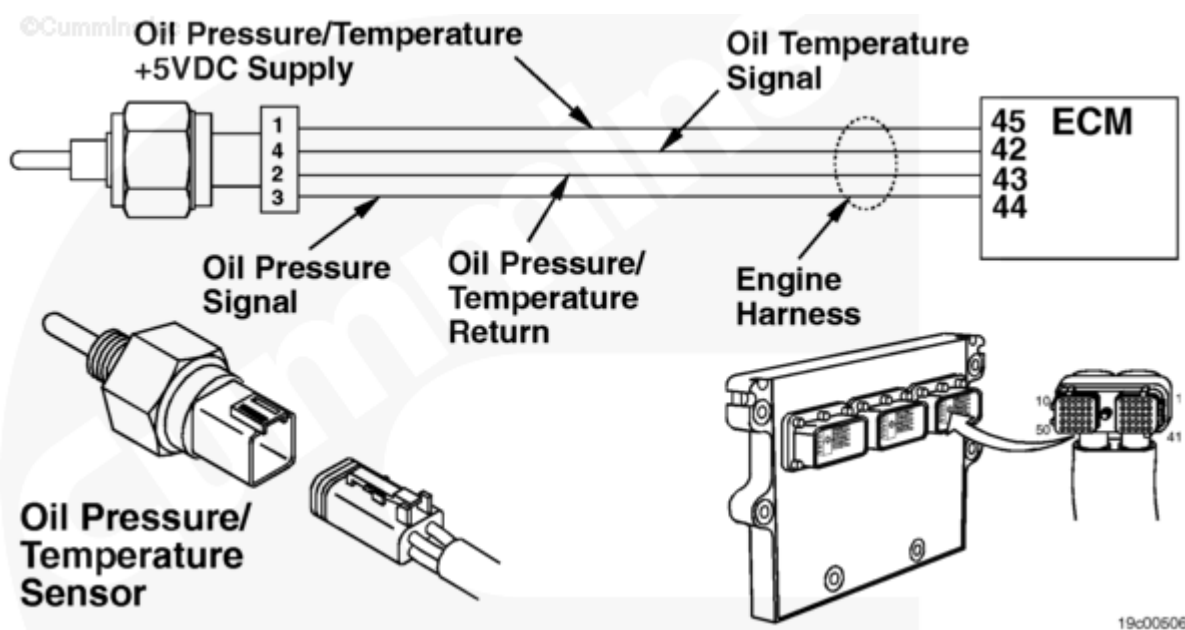

Oil Temperature Sensor Circuit

Circuit Description

The oil pressure/temperature sensor is used by the electronic control module (ECM) to monitor the temperature of the engine oil. If the oil temperature becomes too high and the engine protection is enabled, a derate condition can be incurred, possibly leading to shutdown.

Component Location

The oil pressure/temperature sensor is located on the engine block to the left of the fuel filter, behind the air compressor.

Shoptalk

Sensor resistance varies with temperature. Compare your reading to this table:

Temperature (°C)	Temperature [°F]	Resistance (ohms)
0	32	30k to 36k
25	77	9k to 11k
50	122	3k to 4k
75	167	1350 to 1500
100	212	600 to 675

Refer to Troubleshooting Fault Code t05-212 (</qs3/pubsys2/xml/en/procedures/82/82-t05-212.html>)

Last Modified: 02-Sep-2010
