


Fault Code: 213

Oil Temperature Sensor Circuit

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 213 PID(P): P175 SPN: 175 FMI: 4/4 Lamp: Yellow SRT:	Low voltage detected at the oil temperature circuit.	No engine protection for oil temperature.

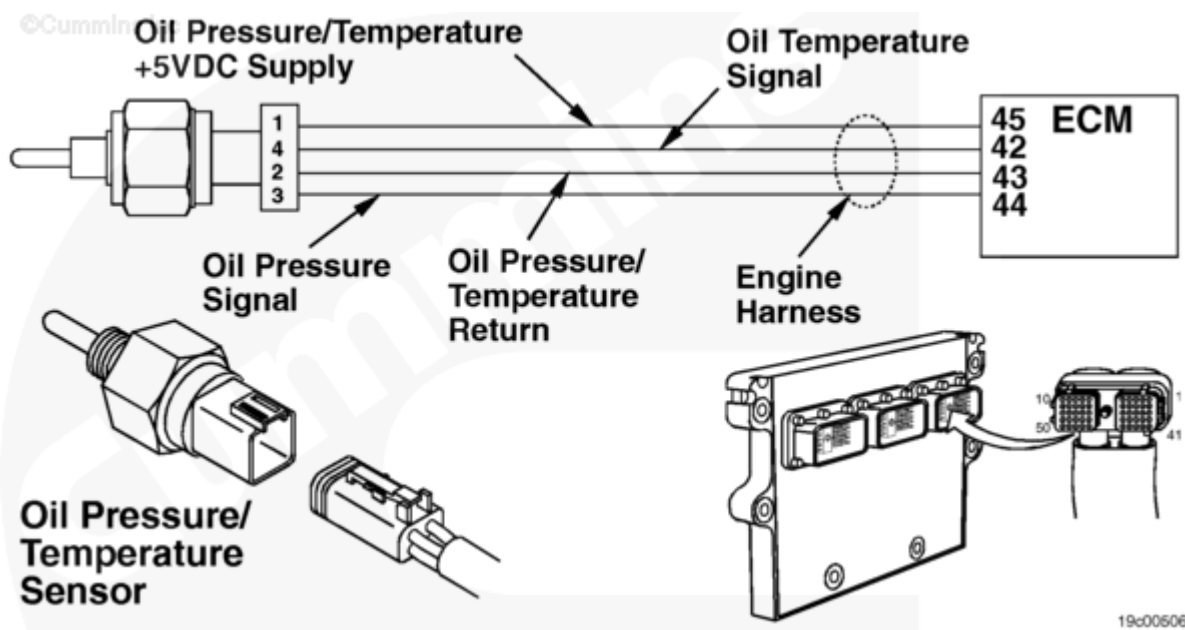

Oil Temperature Sensor Circuit

Circuit Description

The oil pressure/temperature sensor is used by the electronic control module (ECM) to monitor the temperature of the engine oil. If the oil temperature becomes too high and engine protection is enabled, a derate condition could be incurred, possibly leading to shutdown.

Component Location

The oil pressure/temperature sensor is located on the engine block to the left of the fuel filter, behind the air compressor.

Shoptalk

The resistance of the sensor varies with the temperature. Compare your readings with this table:

Temperature (°C)	Temperature [°F]	Resistance (ohms)
0	32	30k to 36k
25	77	9k to 11k
50	122	3k to 4k
75	167	1350 to 1500
100	212	600 to 675

Refer to Troubleshooting Fault Code t05-213 (</qs3/pubsys2/xml/en/procedures/82/82-t05-213.html>)

Last Modified: 02-Sep-2010
