


Fault Code: 255

Fuel Shutoff Solenoid Supply Circuit

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 255 PID(P): S017 SPN: 632 FMI: 3/3 Lamp: Yellow SRT:	Externally supplied voltage detected going to fuel shutoff solenoid supply circuit.	None on performance. Fuel shutoff valve stays on.

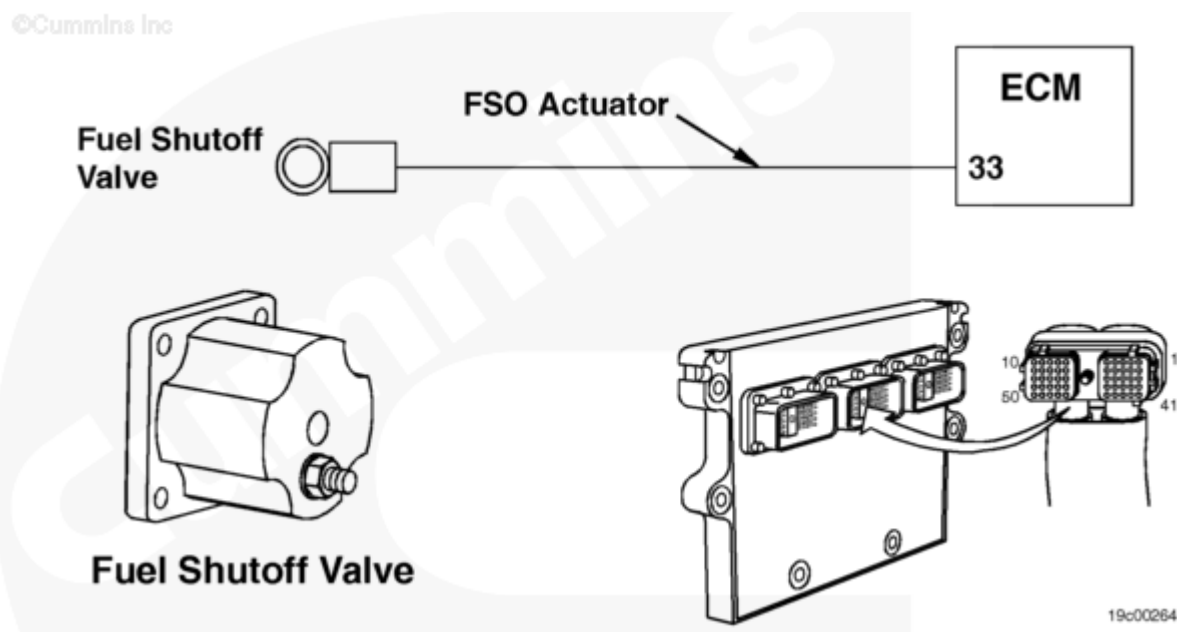

Fuel Shutoff Circuit

Circuit Description

If voltage is externally supplied to the fuel shutoff valve, it will stay open.

Component Location

The fuel shutoff solenoid is located on the fuel pump housing near the fuel outlet line. Unspecified earlier versions used a dedicated return wire (pin 32) that is mounted to one of the shutoff solenoid mounting bolts. Newer models use **only** a fuel shutoff supply wire (pin 33).

Shoptalk

If there is an external shutdown system on the vehicle, make sure it is **not** wired incorrectly and feeding voltage into the fuel shutoff supply circuit.

Refer to Troubleshooting Fault Code t05-255 (</qs3/pubsys2/xml/en/procedures/82/82-t05-255.html>)

Last Modified: 02-Sep-2010
