


Fault Code: 431

Idle Validation Switch Circuit

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 431 PID(P): P091 SPN: 91 FMI: 2/2 Lamp: Yellow SRT:	Voltage detected simultaneously on both the idle validation off-idle and on-idle signal pins.	None on performance.

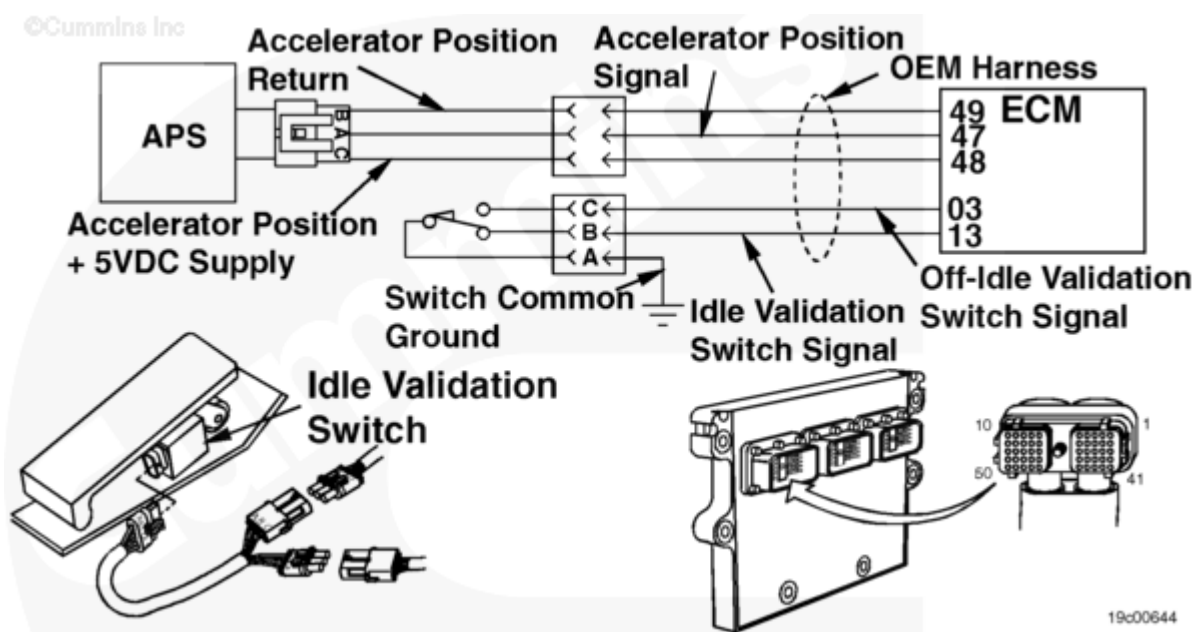

Idle Validation Switch Circuit

Circuit Description

The idle validation switch is used by the electronic control module (ECM) to indicate when the accelerator pedal is released (on-idle) or depressed (off-idle). The switch is adjusted at the factory to switch from on-idle to off-idle at the correct accelerator pedal position.

Component Location

The nonintegrated sensor switch (NISS) is located on the accelerator pedal assembly.

Shoptalk

- This fault code is usually caused by a loose connection, uncalibrated accelerator pedal, or miswired idle validation switch.
- The integrated sensor switch (ISS) has a different idle validation switch (IVS) resistance specification (125 ohms) as compared to nonintegrated sensor switch (NISS) (10 ohms).

Refer to Troubleshooting Fault Code t05-431niss (</qs3/pubsys2/xml/en/procedures/82/82-t05-431niss.html>)

Last Modified: 02-Sep-2010
