


Fault Code: 213

Oil Temperature Sensor Circuit

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 213 PID(P): P175 SPN: 175 FMI: 4 Lamp: Yellow SRT:	Low voltage detected at the oil temperature signal pin 35 of the engine harness.	No action is taken by the electronic control module (ECM).

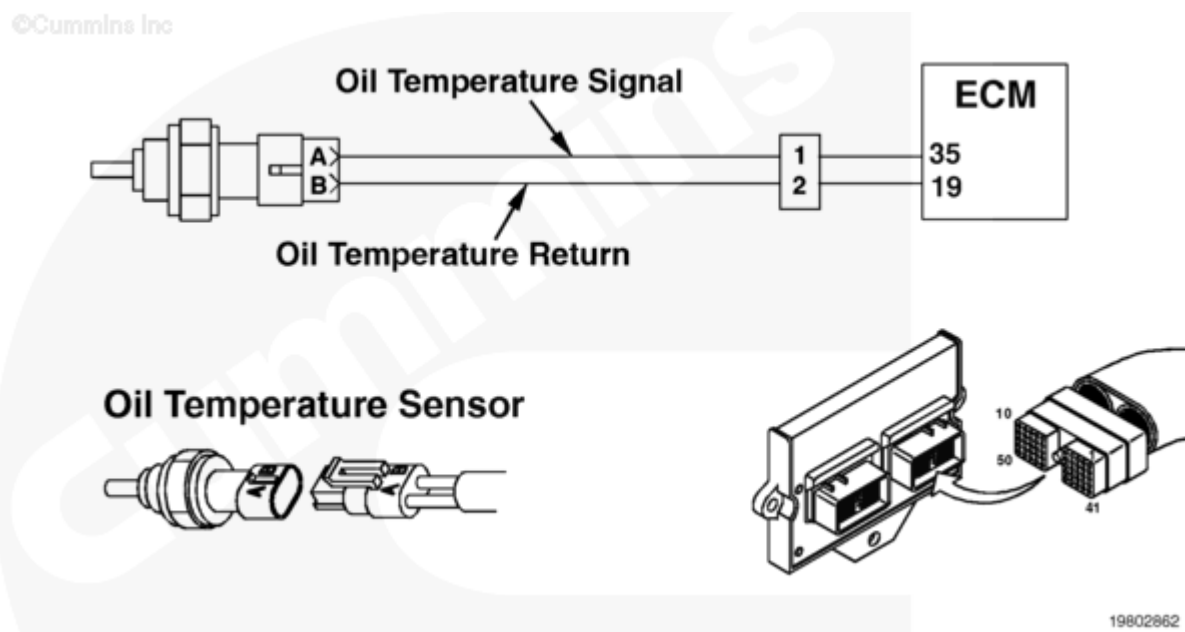

Oil Temperature Sensor Circuit

Circuit Description

The oil temperature sensor monitors oil temperature and passes information to the ECM through the engine harness.

Component Location

The oil temperature sensor is located in the oil pan on the left side of the engine. The oil temperature sensor is **only** present on engines with CENSE™.

Shoptalk

The resistance of the sensor varies with the temperature. Compare the reading you observe to the following table if the sensor is functioning properly.

Temperature (°C)	Temperature [°F]	Resistance (ohms)
0	32	30k to 36k
25	77	9k to 11k
50	122	3k to 4k
75	167	1350 to 1500
100	212	600 to 675

Refer to Troubleshooting Fault Code t05-213 (</qs3/pubsys2/xml/en/procedures/87/87-t05-213.html>)