


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries.

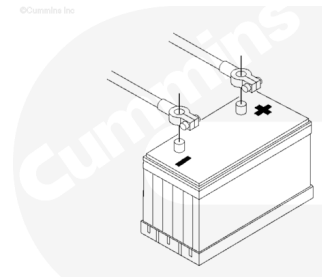


13900050

Remove


Wax-Motor Style

Remove the temperature switch.

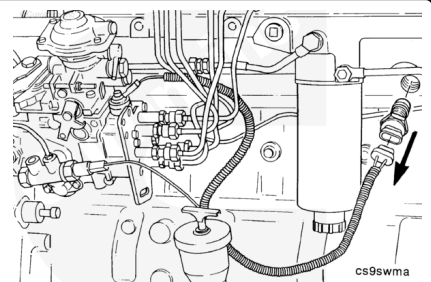

⚠ CAUTION ⚠

The switches are not interchangeable. White smoke will be present if the wrong temperature switch is used.

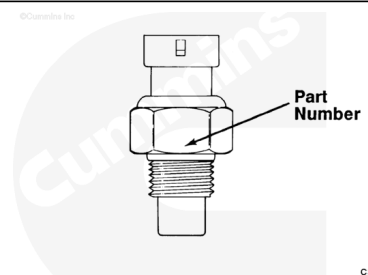

cs900gv


Notes:

1. The wax motor KSB (used on pre-1991 engines) uses a 71°C [160°F] normally open coolant temperature switch, Cummins Part Number 3915945.
2. The electrical solenoid-style KSB (used on '91 models and newer) uses a 32°C [90°F] normally closed intake manifold

temperature switch, Cummins Part Number 3921642.

Electrical Solenoid Style

Remove the temperature switch from the intake manifold.

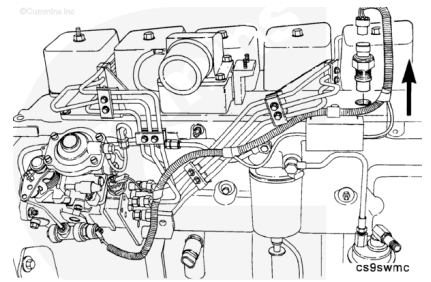


⚠ CAUTION ⚠

The switches are not interchangeable. White smoke will be present if the wrong temperature switch is used.

Check the part number to be sure the correct temperature switch is used.

Note : The electrical solenoid-style KSB (used on 1991 models and newer) uses a 32°C [90°F] normally closed intake manifold temperature switch, Part Number 3921642.

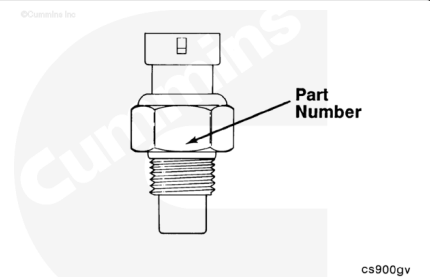


Test

Wax-Motor Style

The operation of the temperature switch for the wax motor style KSB can be checked by connecting a multimeter to the switch, placing the switch in water, and then heating the water to 71°C [160°F].


Connect the multimeter to the two pins on the left when viewed with the plastic tang on top.

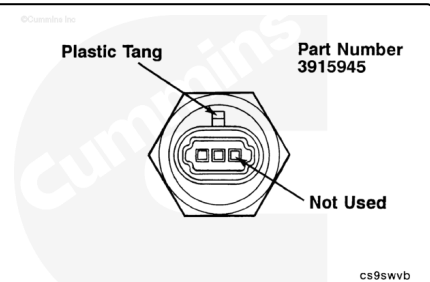

Check the water temperature with a thermometer.

The multimeter **must** indicate an open circuit below 71°C [160°F] and a closed circuit above 71°C [160°F].


Replace the switch, if necessary.

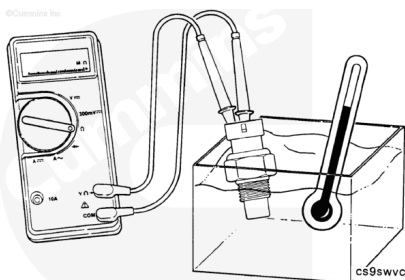

Electrical Solenoid Style

Although the electrical solenoid-style KSB uses an intake manifold temperature switch, the operation of the switch can be checked by connecting a multimeter to the switch, placing the switch in ice water, and then heating the water to 32°C [90°F].


Connect the multimeter to the two outside pins of the temperature switch.

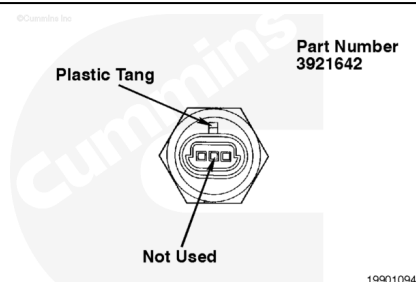

Check the water temperature with a thermometer.

The multimeter should indicate a closed circuit below 32°C [90°F] and an open circuit above 32°C [90°F].

Replace the switch, if necessary.

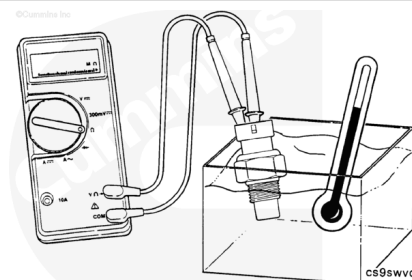


Install

Electrical Solenoid Style

Install the original pressure relief valve or a replacement into the KSB housing.

Torque Value: 13 n•m [115 in-lb]

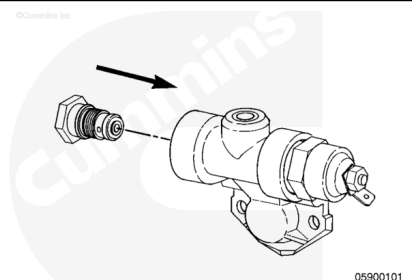


Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries
- Operate the engine and check for leaks.

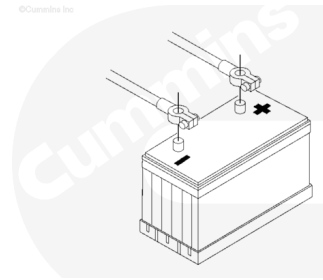

13900060