


Trainings ▾

Install

Coat all capscrew threads with an unleaded anti-seize compound.

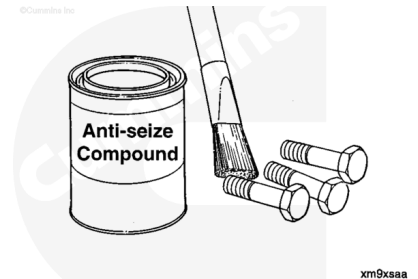


For 6 cylinder engines, install the exhaust manifold, new gaskets, spacers and mounting capscrews.

Follow the tightening sequence shown in the illustration.

Tighten the exhaust manifold mounting capscrews.

Torque Value: 43 n•m [32 ft-lb]

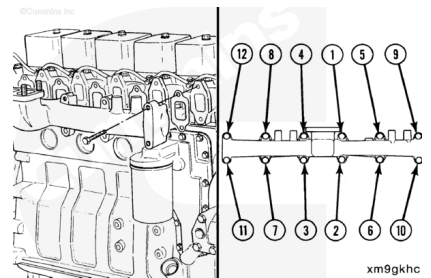

For 4 cylinder engines, install the exhaust manifold, new gaskets, spacers and mounting capscrews.

Follow the tightening sequence shown in the illustration.

Tighten the exhaust manifold mounting capscrews.

Torque Value: 43 n•m [32 ft-lb]

