


Trainings ▾

Remove

Slip Fit


Remove the freon compressor drive belt, if equipped. Refer to the manufacturer's instructions.

Remove the accessory drive pulley retaining capscrew.

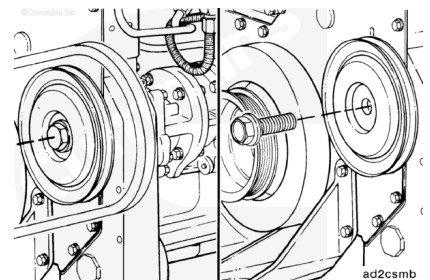

The accessory drive pulley is slip fit, and does **not** require a puller to be removed from the engine.

Remove the accessory drive pulley.

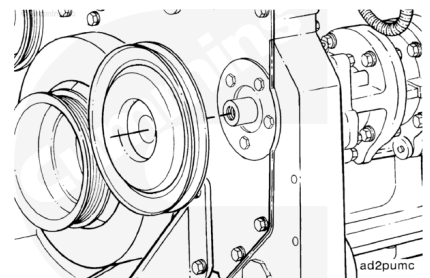


Interference Fit


Remove the freon compressor drive, if equipped. Refer to the manufacturer's instructions.

Remove the pulley retainer capscrew.

Note : Earlier production engines have a retainer snap ring and no capscrews.

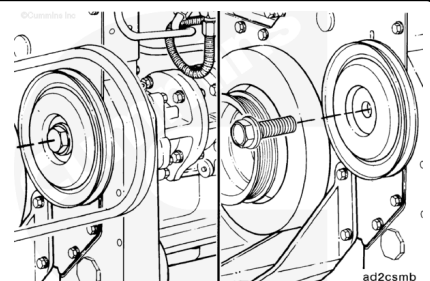

Use a standard puller, Part Number ST-647 or Part Number 3376104, to remove the pulley.

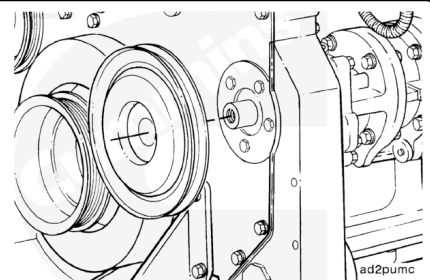

Last Modified: 26-Feb-2009
