


Trainings ▾

Remove

Refer to the following applicable procedure to remove the actuator:

- Fuel Pump Actuator (019-117)
- Rail Actuator (019-337)
- Timing Actuator (019-339).


Use quick-dry electrical contact cleaner, Part Number 3824510, and clean the screen filter area thoroughly.

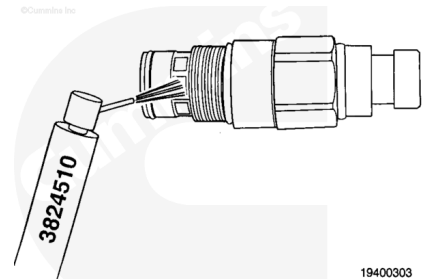

19400303

Use a fine-blade screwdriver or knife edge to separate the snap connection of the screen filter.

Remove and discard the screen filter.

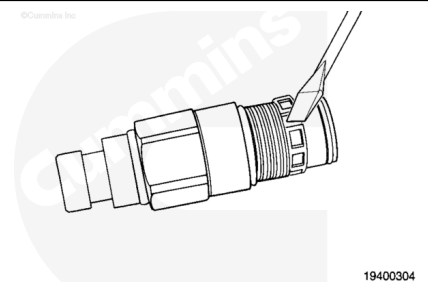


19400304

Install

Wrap a new screen filter, Part Number 3867393, around the actuator.

Use a pair of needle-nose pliers to carefully join the screen filter ends.

Note : Be sure that the screen filter is in its groove and the two ends are nearly joined **before** using the pliers.

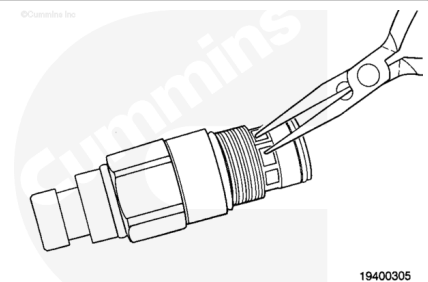

19400305

