


Trainings ▾

Remove


Note : Record all of the programmable parameters, features, and calibration information from the old engine control module (ECM) for programming the new ECM.

Disconnect the originl equipment manufacturer (OEM) interface harness and engine harness from the ECM.

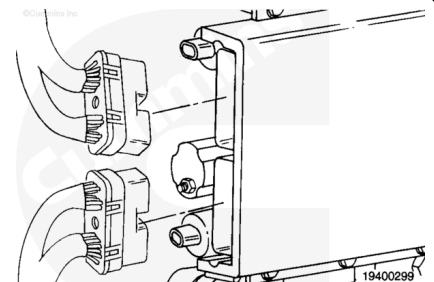

Remove the capscrews that hold the ECM to the control valve body.

Remove the ECM from the control valve body.

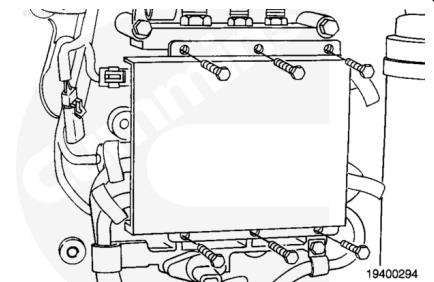


Install

⚠ CAUTION ⚠

Do not blow compressed air into the ECM ports or connectors. Compressed air can contain moisture due to condensation.


Use quick-dry electrical contact cleaner, Part Number 3824510, to remove all dirt and moisture from the ECM connector ports and the harness connectors.

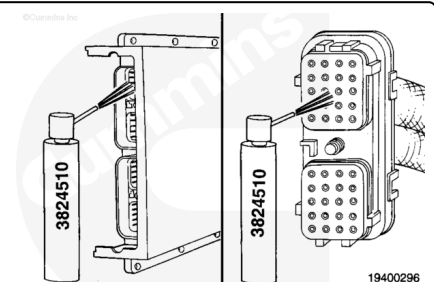

Note : Make sure there is no grease or dirt between the ECM and the control valve body.


Install the new ECM to the control valve body. Tighten the six capscrews.

Torque Value: 8 n·m [71 in-lb]

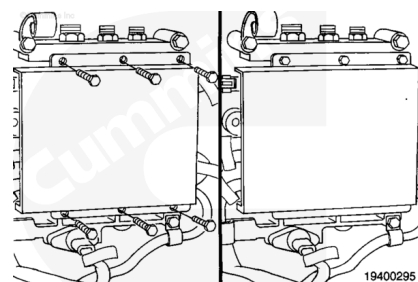

⚠ CAUTION ⚠


Use only Cummins-recommended lubricant DS-ES, Part Number 3822934. Other lubricants, such as lubricating oil or grease, in the connectors can cause ECM damage, poor engine performance, or premature connector pin wear.

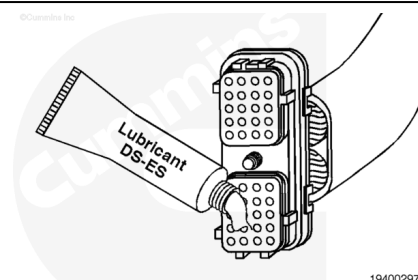

Apply a thin coating of lubricant to the connector nose piece.

Spread the lubricant across the connector nosepiece so it enters every pin hole and lubricates the contacts.

Lubricant **must not** be visible on the surface of the nose piece.

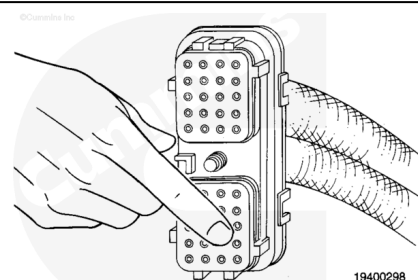

Connect the OEM and engine harness connectors to the ECM. Tighten the connector capscrews.

Use an inch-pound torque wrench, Part Number 3376592, with 4 mm [5/32 in] hex head adapter to tighten the connector jackscrew.

Torque Value: 2.8 n·m [25 in-lb]

Note : Do not over-torque as connector damage can occur.

Note : When an ECM is replaced, the new ECM must be calibrated. Use INSITE™, Part Number 3824801, to calibrate the ECM.

Refer to Procedure 019-032 in Section 19

(</qs3/pubsys2/xml/en/procedures/19/19-019-032.html>) to calibrate the new ECM.

