


Fault Code: 316

Fuel Pump Actuator Circuit

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 316 PID(P): S78 SPN: 931 FMI: 3 Lamp: Yellow SRT: 00-670	Fuel pump actuator circuit is open, or supply pin 11 is shorted to battery voltage or ground, or return pin 40 is shorted to battery voltage or ground in the engine harness.	No action by the ECM is taken. Actuator is open or closed, or partially closed.

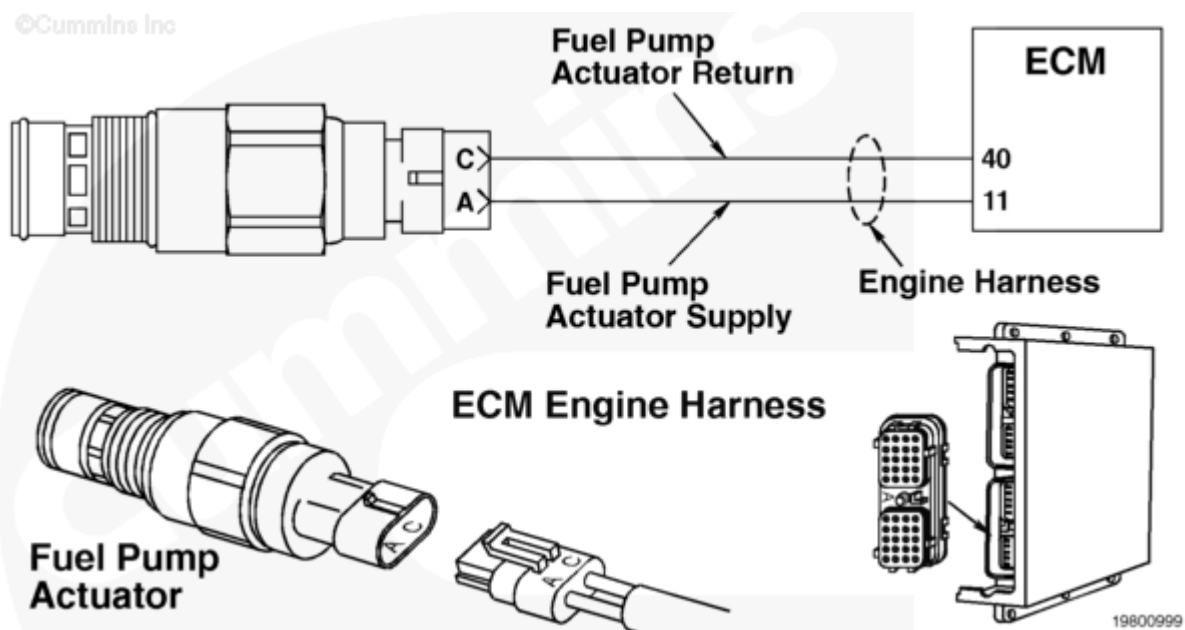

Fuel Pump Actuator Circuit

Circuit Description

The fuel pump actuator circuit supplies current to the fuel pump actuator. The ECM commands a varying amount of current to the fuel pump actuator to control the fuel pump output pressure to the control valve assembly.

Component Location

The fuel pump actuator is located on the fuel pump.

Shoptalk

- Confirm that the actuator connector is firmly in place.
- When there is no power to the actuator, the actuator closes and fuel flow continues.

Refer to Troubleshooting Fault Code t05-316 (</qs3/pubsys2/xml/en/procedures/19/19-t05-316.html>)

Last Modified: 01-Mar-2011
