


Trainings ▾

Inspect


A used oil analysis can help diagnose internal damage and determine the cause, such as:

- intake air filter malfunction
- coolant leaks
- oil diluted with fuel
- metal particles causing wear.

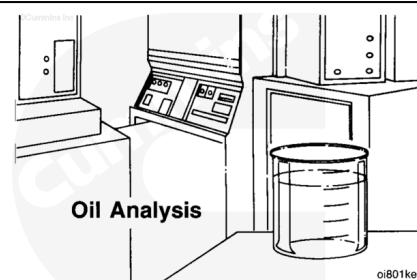

Note : Do not disassemble an engine for repair based **only** on the results of an oil analysis. Inspect the oil filters also. If the oil filter shows evidence of internal damage, find the source of the problem and repair the damage. See the appropriate section(s) of this manual based on the following oil filter inspection.

For additional oil analysis information, refer to Cummins® Engine Oil and Oil Analysis Recommendations, Bulletin 3810340 (</qs3/pubsys2/xml/en/bulletin/3810340.html>).

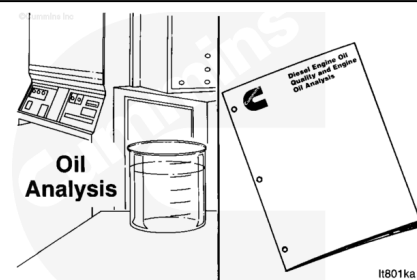

Use tube cutter, Part Number 3376579, to open the combination oil filter.

Inspect the filter element for evidence of moisture or metal particles.

Metal	Possible Source
Copper	Bearings and Bushings
Chromium	Piston Rings
Iron	Cylinder Liners, Overhead Components
Lead	Bearing Overlay Material
Aluminum	Piston Wear or Scuffing

