


Trainings ▾

Maintenance Check

Industrial Applications


Every 6000 hours or 2 years, measure the drive pulley flange end clearance.

Remove the fan drive belt.

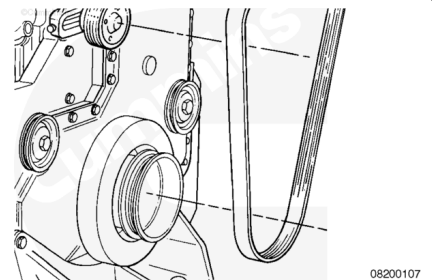


Inspect the fan hub for:

- Freedom of rotation
- Cracks
- Grease seal leakage.

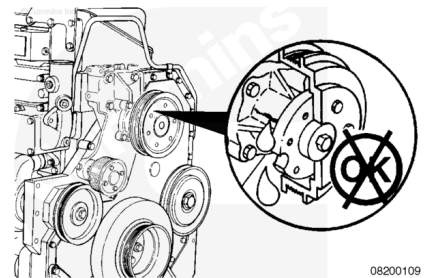

Measure the fan hub end clearance.

Fan Hub End Clearance		
mm		in
0.08	MIN	0.003
0.41	MAX	0.016

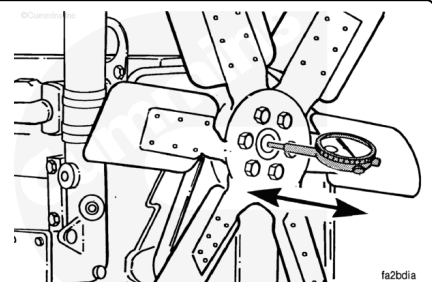

Replace or rebuild the fan hub if the end clearance does **not** meet these specifications, or contact a Cummins® Authorized Repair Location for rebuilding the fan hub.

