

Trainings ▾

Install

Automotive with CM875, CM870 and CM570


Remove any protective caps or heavy tape.

Loosely install the bottom two mounting capscrews and install the EGR cooler onto them.


Install the top three capscrews and tighten all five capscrews.

Torque Value: 20 n•m [177 in-lb]


Install a new EGR cooler connection gasket with the adhesive side on the piloted end of the EGR cooler connection, where it connects with the EGR valve.

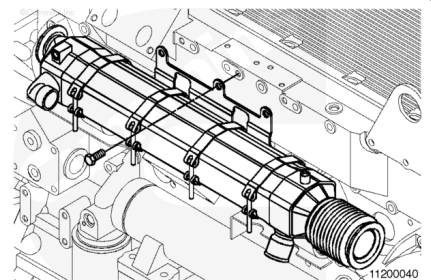

Before installing the V-Band clamp, coat the clamping surface with high temperature anti-seize compound.

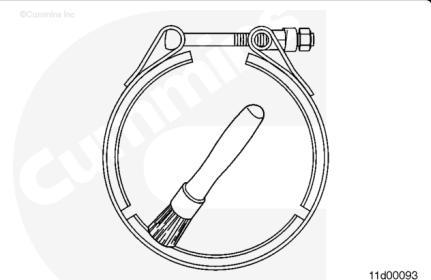


Install the V-Band clamps between the EGR valve and EGR cooler connection.

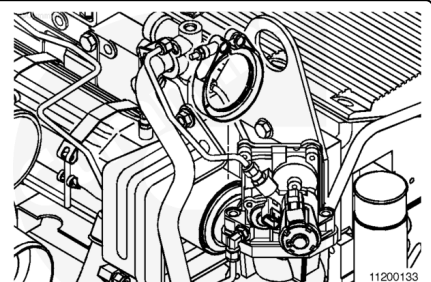

Tighten the V-Band clamp between the EGR cooler connection and the EGR valve.

Torque Value: 17 n•m [150 in-lb]

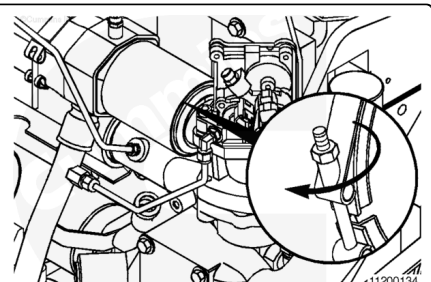

Automotive with CM876


Remove any protective caps or heavy tape.

Loosely install the bottom two mounting capscrews (1) and install the EGR cooler onto them.


Install the top three capscrews (2) and tighten all five capscrews.

Torque Value: 20 n•m [177 in-lb]


Install new EGR cooler connection gaskets with the adhesive side on the piloted end of each joint.

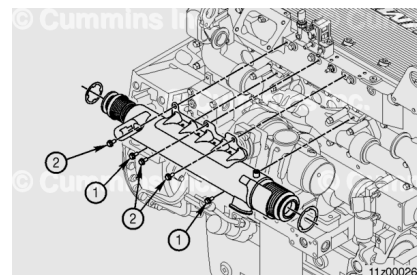

Before installing the V-Band clamp, coat the clamping surface with high temperature anti-seize compound.

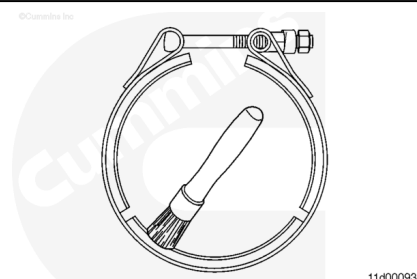

Install the V-Band clamp between the EGR valve and the exhaust manifold.

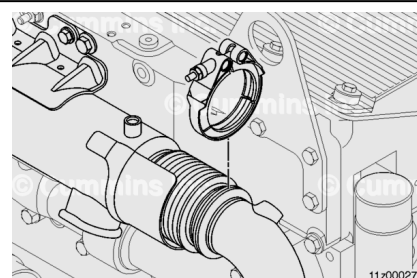

Tighten the V-Band clamps.

Torque Value: 17 n•m [150 in-lb]

