


Trainings ▾

Initial Check


Install a fitting at the inlet transfer pump.

Install a vacuum gauge that has a range of at least 0 to 508 mm Hg [0 to 20 in Hg].

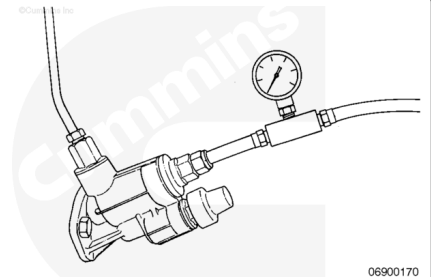

Start the engine, and run at low or high idle.

mm-hg		in-hg
101.6	MAX	4.0

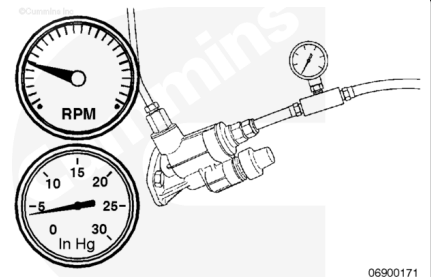

If the fuel inlet restriction is too high, check to make sure that the OEM lines from the tank are sized properly, there are no kinks or bends in the lines, and the lines are **not** clogged.

Make sure that there are no clogged fuel strainers or malfunctioning check valves.

