


Trainings ▾

Install

⚠ CAUTION ⚠


Failure to fill the pump with oil during installation can result in a slow prime at initial engine start-up, resulting in severe engine damage.

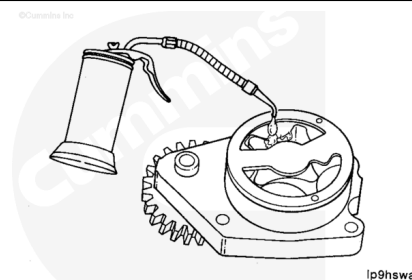

Lubricate the lubricating oil pump with clean 15W-40 engine oil.

⚠ CAUTION ⚠

To reduce the possibility of engine damage, make sure the idler gear pin is installed in the locating bore in the cylinder block.

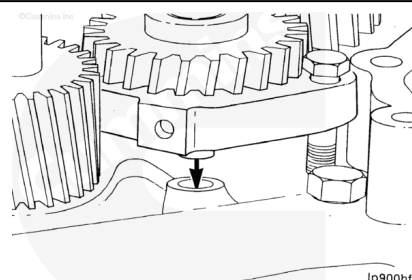

Install the lubricating oil pump.

Note : If installing a new lubricating oil pump ensure that the pump is correct for your engine. For example, lubricating oil pumps for 4 and 6 cylinder engines are physically interchangeable, but have different flow characteristics.


Using the sequence shown, torque the capscrews in the following sequence:

Initial Torque

Torque Value: 8 n•m [70 in-lb]


Final Torque

Torque Value: 24 n•m [212 in-lb]

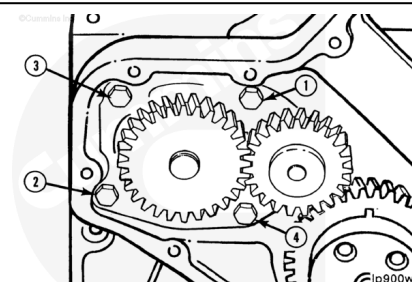

Note : The back plate on the pump seats against the bottom of the bore in the cylinder block. When the lubricating oil pump is correctly installed, the flange on

the lubricating oil pump will not touch the cylinder block.

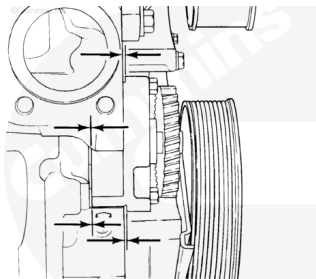


lp900wd

Note : Be sure to check if gear backlash is correct when installing a new lubricating oil pump.

Use gauge, Part Number 3824564, and magnetic base, Part Number 3377399, measure the lubricating pump driven gear backlash.

Note : The oil pump driven gear backlash limits for rear gear train engines and front gear train engines are different. Rear gear train engine use a lubricating oil pump with straight cut gears and front gear train engines use a lubricating oil pump with helical cut gears.

Note : If the adjoining gear moves when you measure the backlash, the reading will be incorrect.

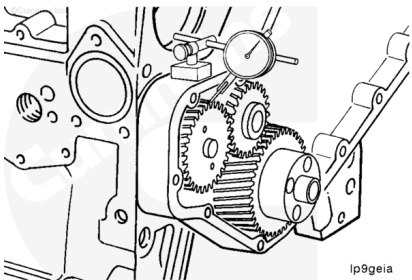

lp9geia


	mm		in
Rear Gear Train	0.300	MIN	0.011
	0.500	MAX	0.019
Front Gear Train	0.076	MIN	0.003
	0.330	MAX	0.013

Note : If you are reinstalling a used pump and have already measured the backlash you do not need to complete this step.

Note : Be sure to check if gear backlash is correct when installing a new lubricating oil pump.

Use gauge, Part Number 3824564, and magnetic base, Part Number 3377399, measure the lubricating pump idler gear backlash.

Note : The oil pump idler gear backlash limits for rear gear train engines and front gear train engines are different. Rear gear train engine use a lubricating oil pump with straight cut gears and front gear train

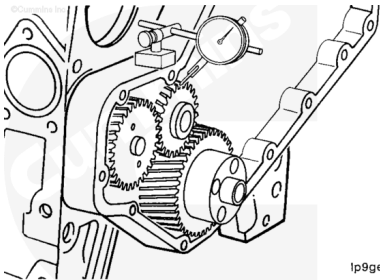

lp9geic

engines use a lubricating oil pump with helical cut gears.

Note : If the adjoining gear moves when you measure the backlash, the reading will be incorrect.

	mm		in
Rear Gear Train	0.150	MIN	0.005
	0.250	MAX	0.009
Front Gear Train	0.076	MIN	0.003
	0.330	MAX	0.013

Note : If you are reinstalling a used pump and have already measured the backlash you do not need to complete this step.