


Trainings ▾

Measure

Measure the boost pressure at the intake manifold by using one of the tapped or plugged intake access holes shown in the illustration. Refer to the specifications in Procedure 018-019 (</qs3/pubsys2/xml/en/procedures/40/40-018-019-tr.html>) (Air Intake System in Section V) for the engine being worked on. If the specifications for the engine being worked on are **not** listed, see the engine data sheet.

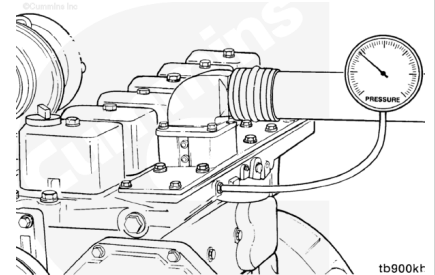

Note : If the engine has charge-air-cooling, testing **must** be done to make certain that the charge-air-cooler system is **not** leaking or restricting the turbocharger boost pressure. Refer to Procedure 010-027 (</qs3/pubsys2/xml/en/procedures/40/40-010-027-tr.html>) for charge-air-cooler testing.

Exhaust leaks can usually be detected audibly or visually by a discoloration caused by the escaping hot gases.

Do **not** overlook exhaust restriction as a cause of low power. If the exhaust gases can **not** flow freely, the turbocharger will **not** operate efficiently.

