


Trainings ▾

Install

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

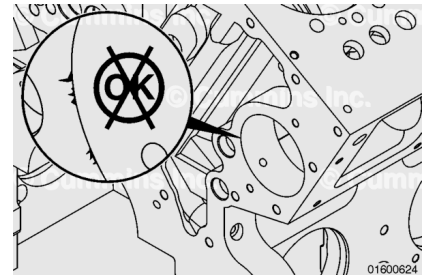


Prior to installing the bushing, ensure there are no burrs around the edge of the camshaft bushing bores.

If found, use an appropriate tool to remove any burrs.

Clean the bushing bores thoroughly and dry with compressed air. Refer to Procedure 001-026 in Section 1.

(/qs3/pubsys2/xml/en/procedures/56/56-001-026.html)

Align the oil holes in the bushing with the oil drilling in the block.

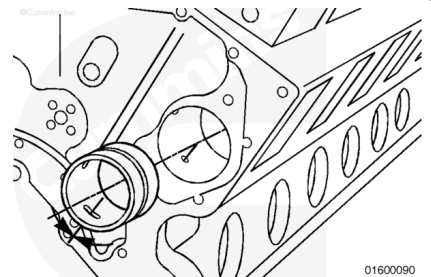


⚠ CAUTION ⚠

Do not damage the bushing during installation. If damage occurs serious engine damage can result.

⚠ CAUTION ⚠

To reduce the possibility of engine damage, make sure that the front camshaft bushings are below the surface of the block.

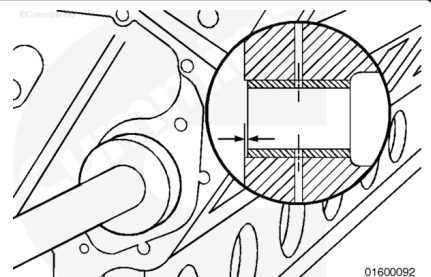

Install the bushing until the oil holes are aligned.

Check the alignment of the bushing oil holes.

Use a 7-mm [1/4-in] Allen wrench. If the Allen wrench will **not** fit into the oil drilling, the camshaft bushing **must** be replaced.

There are three holes in each bushing.

All holes **must** be aligned, except on the front bushing.

There are no drillings to align with the upper holes on the front camshaft bushing.

