


Trainings ▾

Install

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

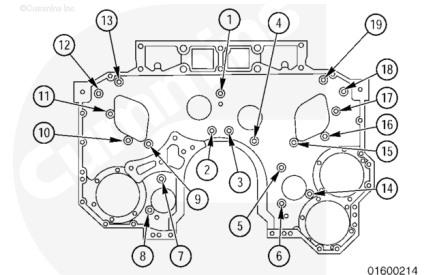

Locate the gear housing gasket and gear housing on the locating dowels.

Note : Loctite™ 242, Part Number 3824040, or equivalent, must be applied to the capscrews during installation. Loctite™ 242 is not required if the capscrews being used are new capscrews with a Loctite™ patch applied to the capscrew threads.

Install the mounting capscrews.

Use the sequence shown in the illustration and tighten the capscrews.

Torque Value: 80 n•m [59 ft-lb]