


Trainings ▾

Install

The grooves in the thrust washer **must** be positioned toward the gear.


Use Lubriplate™ 105, or equivalent. Lubricate the gear bushing, shaft, and thrust washer.

Lubricate the capscrews with clean engine oil. Assemble the parts as illustrated.

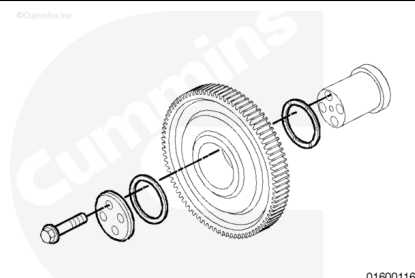

Note : The left bank idler gear is shown in the illustration and **must** be installed last.

Align the “V” on the idler with the “X” on the crankshaft gear. Align the “X” on the camshaft gears in the 12-o'clock position, install the camshaft locking pin.

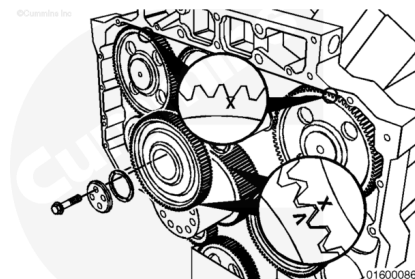


Rotate the idler shaft as necessary to align the mounting capscrew holes.

The oil holes in the idler shaft **must** be placed in the 11-o'clock position on the right-bank idler shaft.

Use the capscrews to pull the shaft into the bore.

Use the following steps to tighten the capscrews in the sequence shown.

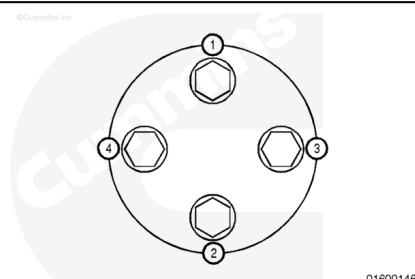

Torque Value:

1. 80 n•m [59 ft-lb]
2. 165 n•m [122 ft-lb]
3. 280 n•m [207 ft-lb]


Use a dial indicator to measure the idler gear end clearance.

Right Bank Camshaft Idler Gear End Clearance		
mm		in
0.15	MIN	0.006

Right Bank Camshaft Idler Gear End Clearance

mm		in
0.33	MAX	0.013

If the clearance is **not** within specifications, check for foreign material between the parts and proper location of the thrust washers.

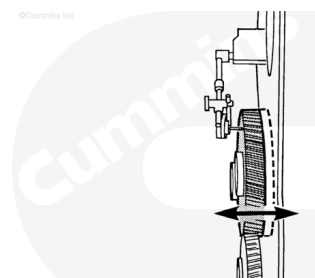


if4001a

Measure the front gear train backlash.

Front Gear Train Backlash

mm		in
0.07	MIN	0.003
0.51	MAX	0.020

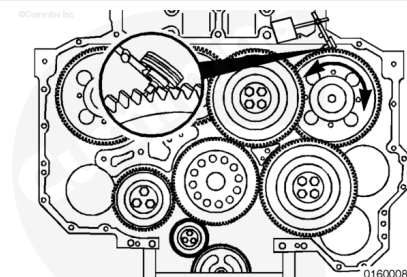

01600087

Last Modified: 23-Aug-2018