


Trainings ▾


Install with Mechanically Actuated Injector

Install the gasket, cam follower cover, and capscrews.

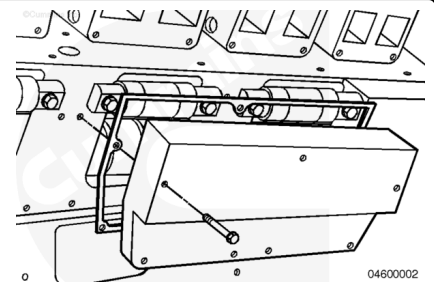


Tighten the seven capscrews in the sequence shown in the illustration.

Torque Value: 45 n•m [33 ft-lb]

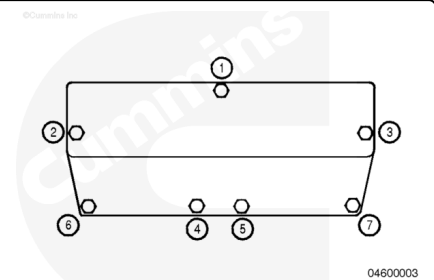

with Electronically Actuated Injector


Install the gasket into the cam follower cover.

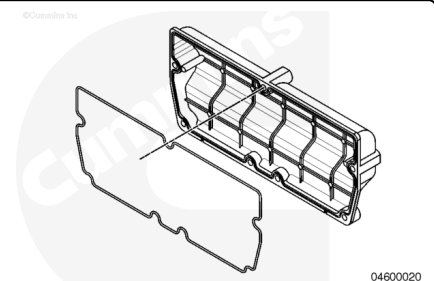

Install the left bank cam follower covers in the position shown.

Note the locations for the different length capscrews.


1. M10 x 80
2. M10 x 45
3. M10 x 65.

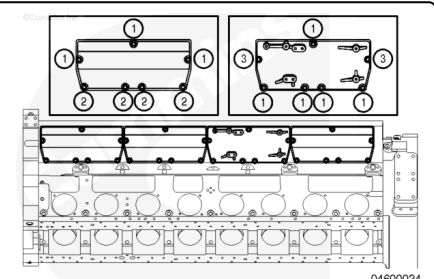

Install the right bank cam follower covers in the position shown.

Note the locations of the different length capscrews.

1. M10 x 80
2. M10 x 45

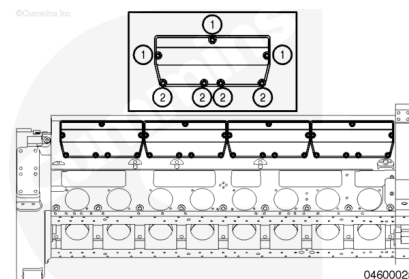

Tighten the capscrews in the sequence shown in the illustration.

Torque Value: 45 n•m [33 ft-lb]

