


Trainings ▾


Exploded View

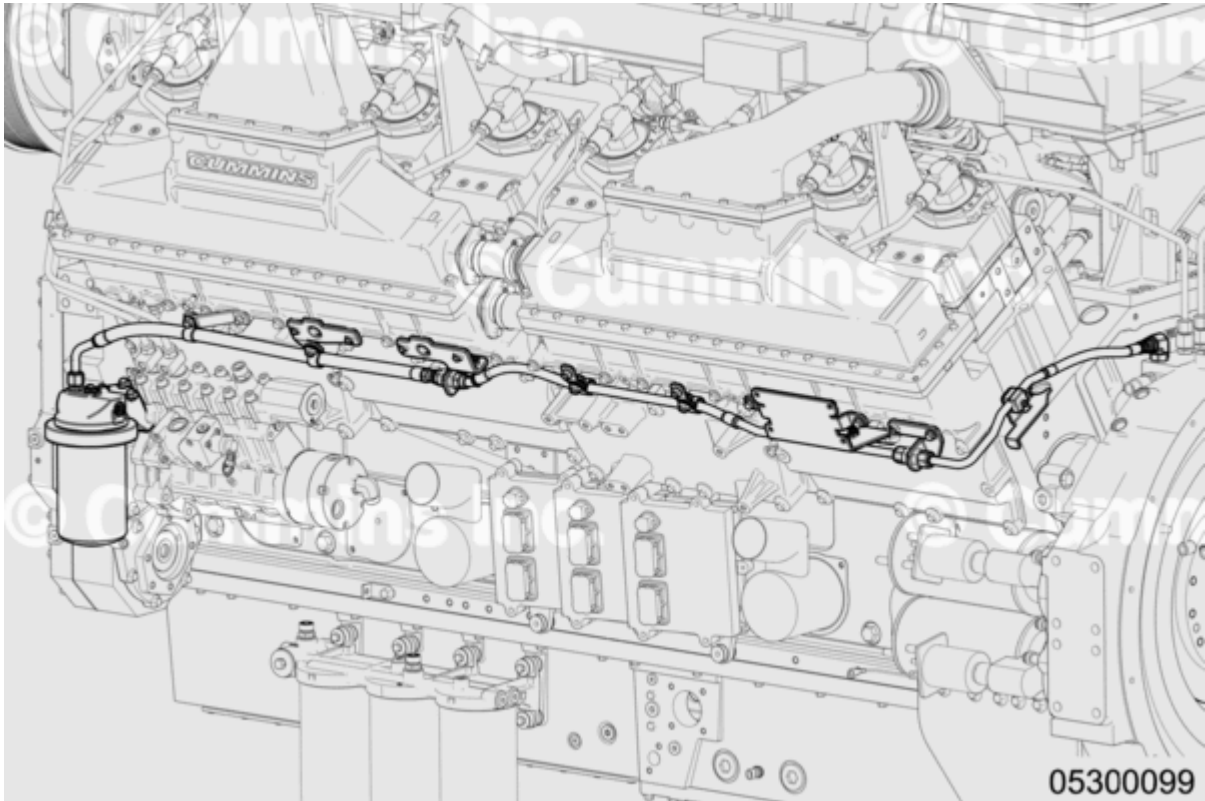


The exploded view above shows the high pressure supply line installed.

Remove


Disconnect both unions and pillow supporting block on rear of the engine.

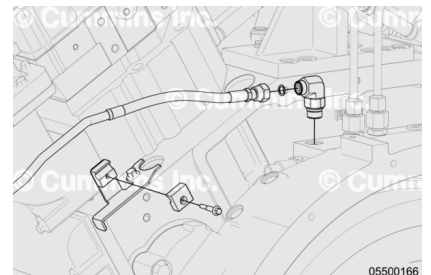

Disconnect union and the rear and center the engine and supporting P-clips.

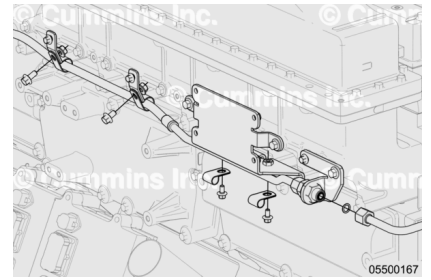

Disconnect the union from center and the engine
Disconnect the hose from Fuel pump oil filter head
Disconnect supporting P-clips.

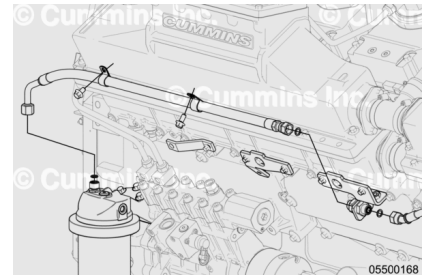


Install

Fit the fuel pump oil filter head. Refer to Procedure 007-111 in Section 7.
(/qs3/pubsys2/xml/en/procedures/56/56-007-111.html)

Note : The standard fuel pump dedicated lube filter head is different to the one required for the oil pressure supplied from the flywheel end of the engine.

Install union support bracket on aftercooler joint using M8 x1.5
20mm long bolts.

Torque Value: 18 n•m [159 in-lb]

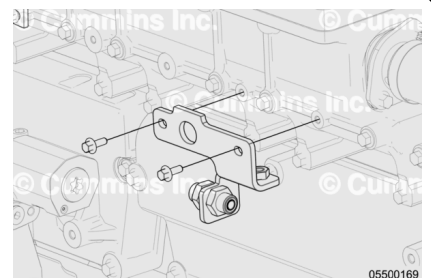


Remove the fuel manifold. Refer to Procedure 006-021 in
Section 6. (/qs3/pubsys2/xml/en/procedures/56/56-006-021-
tr.html)

Install bracket behind fuel manifold.

Install fuel manifold using new M8 30mm bolts.


Torque Value: 18 n•m [159 in-lb]

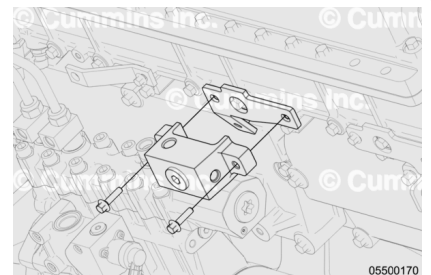

Pass the hose through the two brackets.


Attach hose using the P-Clip to fuel manifold hose bracket.

Torque Value: 36 n•m [26 ft-lb]

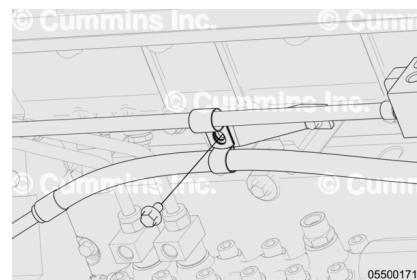


Attach the straight edge swivel section of the Hose to the union support bracket.

Torque Value: 65 n•m [48 ft-lb]

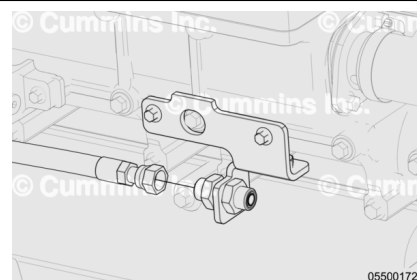


Install P-clip on hose and supporting bracket behind fuel manifold.

Torque Value: 36 n•m [27 ft-lb]

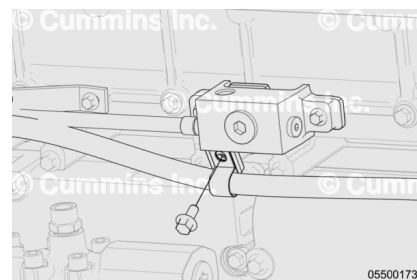


Connect the supply hose to the oil filter head.

Torque Value: 65 n•m [49 ft-lb]

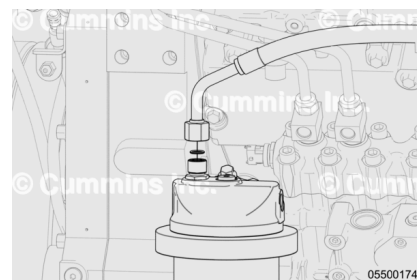


Install brackets to aftercooler cover using M8 20mm bolts.

Torque Value: 18 n•m [159 in-lb]

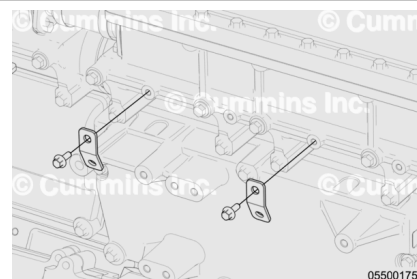


Fit large bracket to aftercooler cover using four long aftercooler intake bolts.

Torque Value: 18 n•m [159 in-lb]

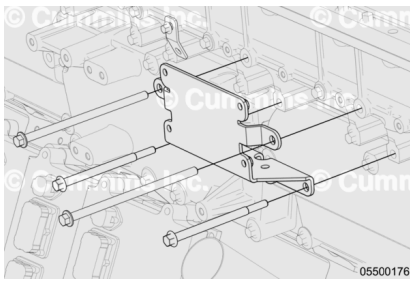


Install smaller bracket. right bolt using longer aftercooler bracket and right bolt using M8 20mm bolt.

Torque Value: 18 n•m [159 in-lb]

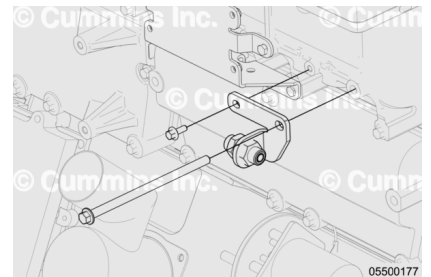


Pass hose through brackets and attach right end of hose to the union.

Note : Do not tighten the joint at this point.

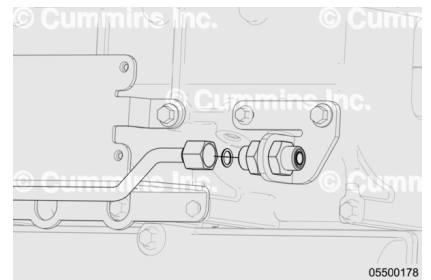


Install P-clips and M8 16mm bolts underneath the larger bracket to support the hose.

Torque Value: 18 n•m [159 in-lb]

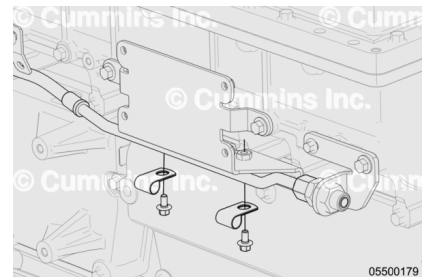


Attach hose to lower union.

Torque Value: 65 n•m [48 ft-lb]

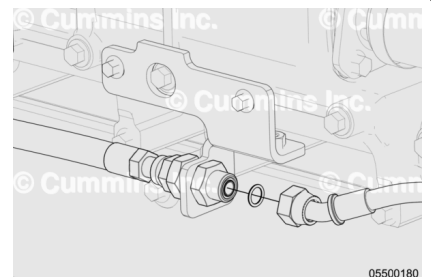

Install P-clips to aftercooler brackets using M10 16mm bolt and nut.

Torque Value: 36 n•m [27 ft-lb]

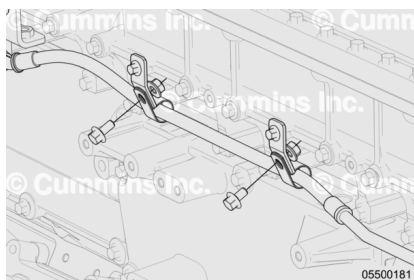

Install bracket on rear of engine using M10 20mm bolt.

Torque Value: 36 n•m [27 ft-lb]



Fit union on top of flywheel housing.

Torque Value: 65 n•m [48 ft-lb]

Tighten top union hose.

Torque Value: 65 n•m [48 ft-lb]



Pass hose through routing of the brackets. Connect the hose to the union on the side of the engine.

Connect the hose to the 90 degree union.

Fit pillow block on to the bracket tube using M10 16mm bolt and nut.

Torque Value: 36 n•m [27 ft-lb]

Tighten hose on union connected to side of the engine.

Torque Value: 65 n•m [48 ft-lb]

