

Trainings ▾


Install

⚠ CAUTION ⚠

All water or cleaning solutions must be removed from the interior of the oil cooler element. A failure can result from a contaminated lubrication system if all of the liquid is not removed.

⚠ CAUTION ⚠

When installing new oil cooler elements, make sure that all of the shipping plugs have been removed from the oil cooler elements or the engine will be severely damaged by lack of lubrication.

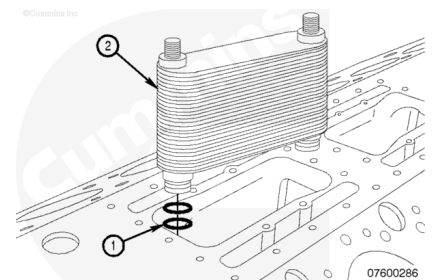

Install the four o-rings (1) in the grooves on each oil cooler element.

Lubricate the four o-rings (1) with vegetable oil for each oil cooler element.

The QSK45 engine contains three oil cooler elements and the QSK60 contains four oil cooler elements.

Install the oil cooler elements.

Install the support gaskets on the top post of the oil cooler element.