

Trainings ▾

Preparatory Steps


- Remove the rocker lever cover. Refer to Procedure 003-011 (/qs3/pubsys2/xml/en/procedures/89/89-003-011.html).
- Remove the rocker levers. Refer to Procedure 003-009 (/qs3/pubsys2/xml/en/procedures/89/89-003-009.html).



Remove

It is a recommended service practice to mark the push rods so they can be reinstalled in their original position.


Remove the push rods.

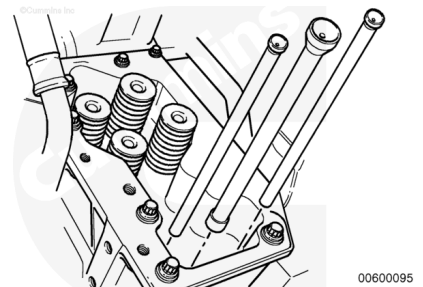

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

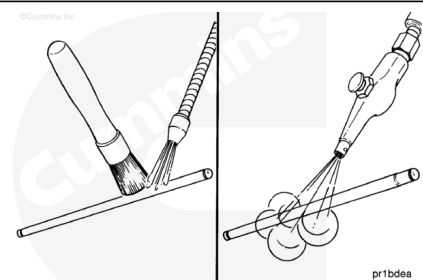

⚠ WARNING ⚠


Wear appropriate eye and face protection when using compressed air. Flying dirt and debris can cause personal injury.

Use solvent to clean the push rods.

Dry the push rods with compressed air.


Inspect the straightness of the push rod by rolling it on a level surface. Replace the push rod if it is bent.

Do **not** use or try to straighten a bent pushrod.

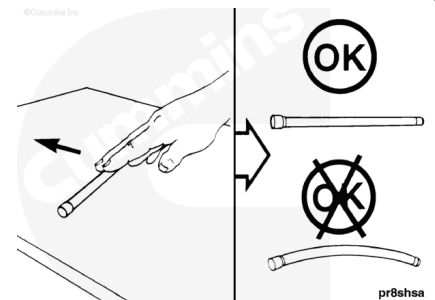

Inspect both ends of the push rods for wear or damage.


The cam follower lever assembly **must** be replaced if a push rod is worn or damaged in the area where it contacts the socket. Replace both the rocker lever adjusting screw and the push rod if the socket surface in the rod or the adjusting screw is damaged.

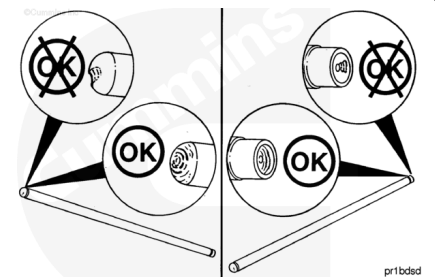

Inspect the socket end of the push rod for uneven wear or scratches.

When parallel scratches are found in the contact area, the push rod **must** be replaced.

If a worn socket is found, the matching adjusting screw in the rocker lever **must** also be replaced.

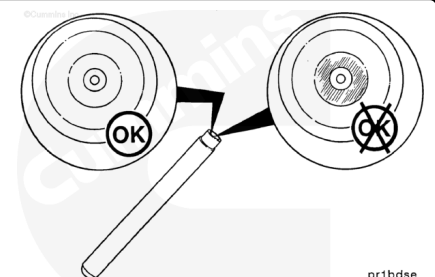


Inspect the ball end of the push rod.

The contact area **must** show a smooth seating area.

If the ball end of the push rod has parallel grooves and scratches with a raised center, the push rod **must** be replaced.

If a worn push rod is found, the mating cam follower lever assembly **must** be replaced.

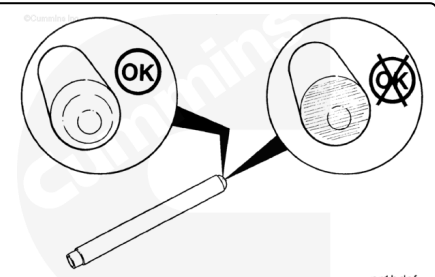


Install

The injector push rods are thicker in the middle than the valve push rods. The intake and the exhaust valve push rods are both the same.

The push rods **must** be seated correctly in the cam followers.

Use clean 15W-40 engine oil to lubricate the sockets in the cam followers.

Install the push rods back into their original position.

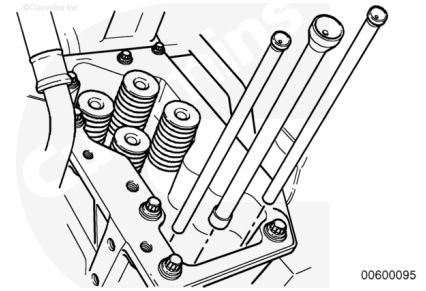

Finishing Steps

- Install the rocker levers. Refer to Procedure 003-009 (</qs3/pubsys2/xml/en/procedures/89/89-003-009.html>).
- Adjust the overhead. Refer to Procedure 003-006 (</qs3/pubsys2/xml/en/procedures/89/89-003-006.html>).
- Install the rocker lever covers. Refer to Procedure 003-011 (</qs3/pubsys2/xml/en/procedures/89/89-003-011.html>).

