

Trainings ▾


Calibrate

⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not used, dispose of in accordance with local environmental regulations.

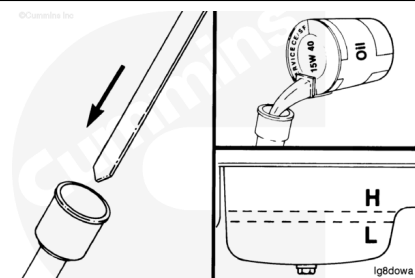

Drain the lubricating oil pan. Refer to Procedure 007-025 (</qs3/pubsys2/xml/en/procedures/89/89-007-025.html>).

The vehicle **must** be on a level surface.

Install the dipstick into the dipstick tube housing.


Use the correct volume of clean 15W-40 oil to fill the oil pan to the specified LOW oil level. Refer to Lubricating Oil System - Specifications in Section V for the correct engine oil capacity for your application.

⚠ CAUTION ⚠

Use care when marking the dipstick, or the dipstick will break if the scribe mark is too deep.


Remove the dipstick, and scribe a mark across the dipstick at the oil level. Label the mark with an L to indicate the LOW oil level.

If a new blank dipstick is being used, cut the dipstick off approximately 38 mm [1.5 in] below the LOW oil level mark.

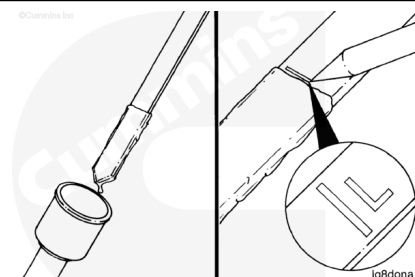

Wipe the excess oil from the dipstick, and install it into the dipstick tube housing.

Use the correct volume of oil to fill the oil pan to the specified high or H oil level. Refer to Lubricating Oil System - Specifications in Section V for engine oil capacity.

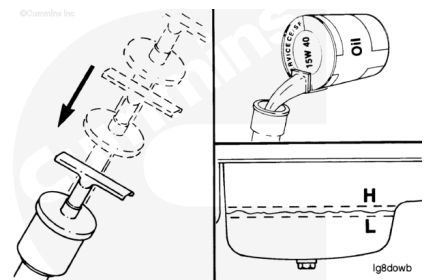

Remove the dipstick and scribe a mark across the stick at the oil level. Label the mark with an H to indicate the high oil level.

