


## Fault Code: 455

### Electronic Fuel Injection Control Valve Circuit - Voltage Above Normal or Shorted to High Source

 Printable Version

#### Overview

| Codes                                                                                  | Reason                                                                                            | Effect                                                     |
|----------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|------------------------------------------------------------|
| Fault Code: 455<br><br>PID(P): S18<br>SPN:<br>FMI: 3<br>Lamp: Flashing<br>SRT: 000-642 | High voltage detected at electronic fuel control valve supply at the engine control module (ECM). | Engine will shut down.<br><br>Engine may <b>not</b> start. |

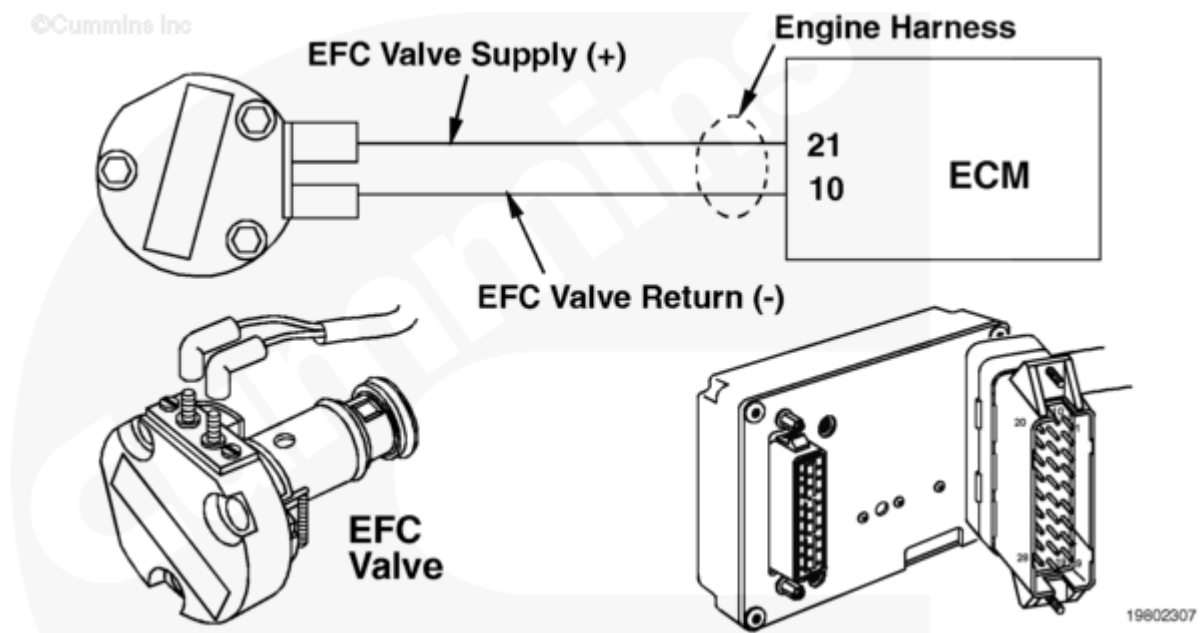

Electronic Fuel Control Valve Circuit

#### Circuit Description

The electronic fuel control valve is an actuator used by the ECM to control fuel flow to the fuel injectors. The electronic fuel control valve has two circuits: electronic fuel control valve supply, and electronic fuel control valve primary return.

## Component Location

The electronic fuel control valve is bolted to the fuel pump on the left side of the engine.

## Conditions For Running The Diagnostics

This diagnostic runs continuously when the keyswitch is in the ON position.

## Conditions For Setting The Fault Codes

The Engine Control Module (ECM) detected the electronic fuel control valve supply was out of range high.

## Action Taken When The Fault Code Is Active

- The ECM illuminates the red STOP ENGINE lamp immediately when the diagnostic runs and fails.

For Power Generation Applications:

- The generator set controller displays the fault immediately when the diagnostics runs and fails.

## Conditions For Clearing The Fault Code

- Turn the keyswitch OFF. Allow the ECM to completely power down and turn the keyswitch ON.
- The fault code status displayed by the recommended Cummins® electronic service tool or equivalent will change to INACTIVE immediately after the diagnostic runs and passes.
- The ECM will turn off the red STOP ENGINE lamp immediately after the diagnostic runs and passes.
- The "Reset All Faults" command in the recommended Cummins® electronic service tool or equivalent can be used to clear active and inactive faults.

For Power Generation Applications:

- To validate the repair, start the engine and let it run for 1 minute at no load.
- The generator set controller will turn off the indicator immediately after the user presses reset.
- The "Reset All Faults" command in the recommended Cummins® electronic service tool or equivalent can be used to clear active faults.

## Shoptalk

Possible causes of this fault code include:

- Malfunctioning or damaged engine wiring harness.
- Damaged or loose connectors.
- Malfunctioning or damaged electronic fuel control solenoid.

Refer to Troubleshooting Fault Code t05-455 (</qs3/pubsys2/xml/en/procedures/98/98-t05-455.html>)

---

**Last Modified: 10-Sep-2021**

---