



Service Tool Instruction

Service Tool Instruction
Number: 3377932

Revision Level:

Released Date: 18-nov-
2002


Description

Valve Guide Replacer

Purpose

This document provides instructions for the valve guide replacer, Part Number 3164427. The valve guide replacer is used to remove and install the valve guides on the QSK23 and QSK78 engines.

©Cummins Inc

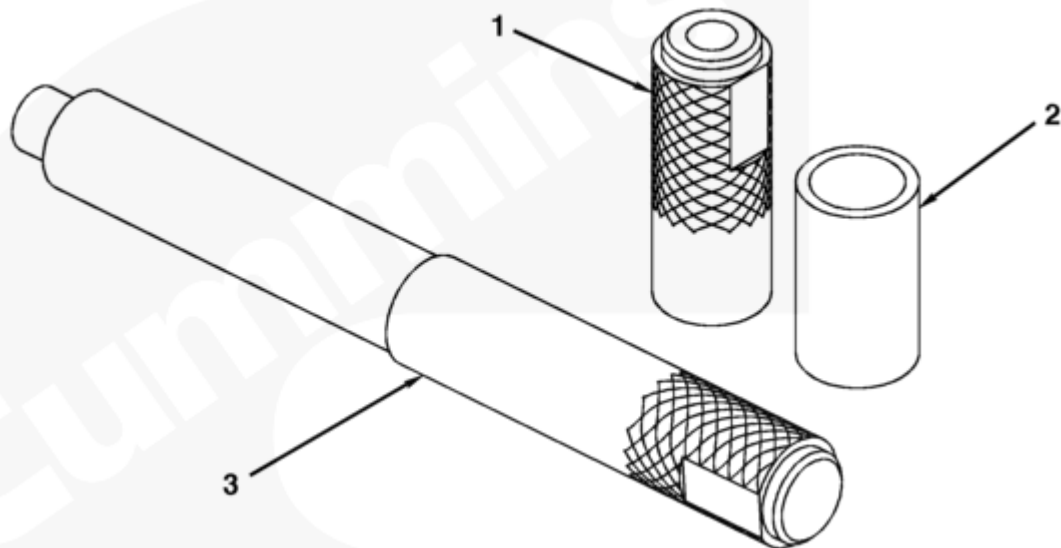


22400149

Table 1, Valve Guide Replacer, Part Number 3164427

Item Number	Part Number	Description	Quantity
1	3164428	Valve guide installer	1
2	3164429	Spacer	1
3	3164436	Valve guide remover	1

Use an arbor press and a valve guide remover, Part Number 3164436, to remove the worn valve guide.

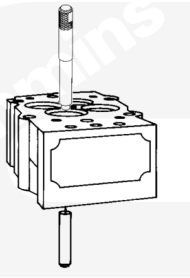

22400150

⚠ WARNING ⚠


Wear appropriate eye and face protection when using compressed air. Flying debris or dirt can cause personal injury.

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to avoid personal injury.

Use solvent to clean the valve guide bores.

Dry with compressed air.

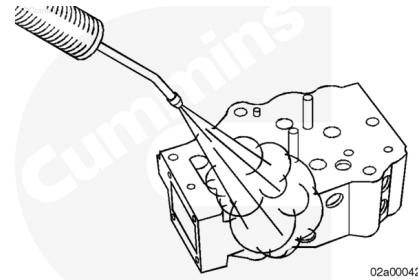


02a00042

⚠ CAUTION ⚠

Make sure the mandrel does not damage the top of the valve guide. If the guide is damaged, the valves can stick, causing severe engine damage.

Position the valve guide in the valve guide bore in the cylinder head.

Slide the spacer, Part Number 3164429, over the valve guide. Use an arbor press and a valve guide installer, Part Number 3164428, to press the guide into the cylinder head.

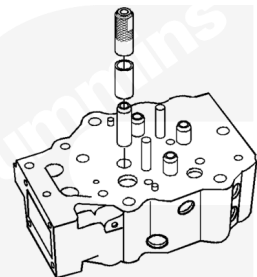

22400151